

LMS111-10100

LMS1xx

2D LIDAR SENSORS





Ordering information

Туре	Part no.
LMS111-10100	1041114

Other models and accessories → www.sick.com/LMS1xx



Detailed technical data

Features

Application	Outdoor
Light source	Infrared (905 nm)
Laser class	1 (IEC 60825-1:2014, EN 60825-1:2014)
Aperture angle	
Horizontal	270°
Scanning frequency	25 Hz 50 Hz
Angular resolution	0.25° 0.5°
Heating	Yes
Working range	0.5 m 20 m
Scanning range	
At 10% remission	18 m
At 90% remission	20 m
Amount of evaluated echoes	2
Fog correction	Yes

Mechanics/electronics

Connection type	1 x M12 round connector
Supply voltage	10.8 V DC 30 V DC
Power consumption	Typ. 8 W, heating typ. 35 W
Housing color	Gray (RAL 7032)
Enclosure rating	IP67 (EN 60529, Section 14.2.7)
Protection class	III (EN 50178 (1997;10))
Weight	1.1 kg
Dimensions (L x W x H)	105 mm x 102 mm x 162 mm

Performance

Response time	≥ 20 ms
Detectable object shape	Almost any
Systematic error	± 30 mm ¹⁾
Statistical error	12 mm ¹⁾
Integrated application	Field evaluation with flexible fields
Number of field sets	10 fields
Simultaneous evaluation cases	10

 $^{^{1)}\ \}mbox{Typical}$ value; actual value depends on environmental conditions.

Interfaces

Ethernet	✓, TCP/IP
Remark	OPC DA
Function	Host
Data transmission rate	10/100 MBit/s
Serial	√ , RS-232
Function	Host, AUX
Data transmission rate	9.6 kBaud 115.2 kBaud
CAN	✓
Function	Extension of outputs
Digital inputs	2 digital and 2 encoder inputs
Digital outputs	3
Optical indicators	7-segment display (plus 5 LEDs showing device status, contamination warning and initial condition) $ \\$

Ambient data

Object remission	2 % > 1,000 % (reflectors)	
Electromagnetic compatibility (EMC)	EN 61000-6-2:2005 / EN 61000-6-3:2007+A1:2011	
Vibration resistance	EN 60068-2-6 (1995-04)	
Shock resistance	EN 60068-2-27 (1993-03)	
Ambient operating temperature	-30 °C +50 °C	
Storage temperature	-30 °C +70 °C	
Ambient light immunity	40,000 lx	

General notes

Note on use	The sensor does not constitute a safety component as defined by relevant legislation on ma-
	chine safety.

Classifications


ECI@ss 5.0	27270990
ECI@ss 5.1.4	27270990
ECI@ss 6.0	27270913
ECI@ss 6.2	27270913
ECI@ss 7.0	27270913
ECI@ss 8.0	27270913

LMS111-10100 | LMS1xx

2D LIDAR SENSORS


ECI@ss 8.1	27270913
ECI@ss 9.0	27270913
ECI@ss 10.0	27270913
ECI@ss 11.0	27270913
ETIM 5.0	EC002550
ETIM 6.0	EC002550
ETIM 7.0	EC002550
ETIM 8.0	EC002550
UNSPSC 16.0901	46171620

Dimensional drawing (Dimensions in mm (inch))

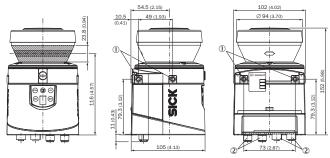

- ① Mounting hole M5 x 7.5
- ② Connector M12


Working range diagram

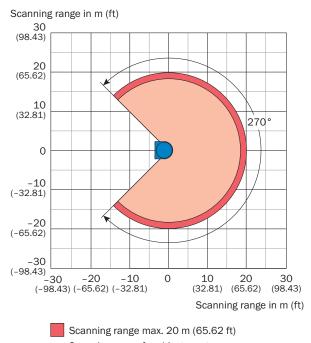

Scanning range for objects up to 10 % remission 18 m (59.06 ft)

PIN assignment


"data" connection



M12 male connector, 8-pin, A-coded

- ① RxD (HOST)
- ② TxD (HOST)
- 3 CAN_H
- 4 CAN_L
- ⑤ GND RS/CAN
- $6 \ln_1$
- \bigcirc In₂
- **®** GND IN1/2

I/O connection



Female connector M12, 8-pin, A-coded

- 1 LMS11x: INC1 A / LMS15x NC1 A or IN4 (switchable, pins 1 and 2 must be switched together)
- ② LMS11x: INC1 B / LMS15x NC1 B or IN3 (switchable, pins 1 and 2 must be switched together)
- ③ OUT2 A
- 4 OUT1A
- ⑤ OUT2 A
- ⑥ OUT3 A
- ⑦ OUT1...3B
- ® OUT1 ... 3 R

Power



Connector M12, 5-pin, A-coded

- \bigcirc V_s
- ② V_s Heat.
- 3 GND
- ④ Reserved
- ⑤ GND heat.

AUX



Female connector M8, 4-pin

- ① Reserved
- ② RxD AUX
- ③ GND RS
- ④ TxD AUX

Recommended accessories

Other models and accessories → www.sick.com/LMS1xx

	Brief description	Туре	Part no.
Device protect	ction (mechanical)		
	Weather hood, 190°	Weather protection cover 190°	2046459
3	Weather hood, 270°	Weather protection cover 270°	2046458
Mounting bra	ckets and plates		
	Standard mounting set for weather hood	Mounting bracket	2046025
	1 piece, mounting bracket for rear mounting on wall or machine	Mounting kit 1a	2034324
R	1 piece, mounting bracket for rear mounting on wall or machine with protection of optics hood	Mounting kit 1b	2034325
	1 piece, mounting bracket, adjustable lateral axis, only in conjunction with mounting kit 1a (2034324) or 1b (2034325)	Mounting kit 2	2039302
	1 piece, mounting plate, adjustable longitudinal axis, only in conjunction with mounting kit 2 (2039302)	Mounting kit 3	2039303
Plug connect	ors and cables		
	Head A: female connector, M12, 8-pin, straight, A-coded Head B: Flying leads Cable: RS-232, RS-422, shielded, 5 m	Connecting ca- ble (female con- nector - open)	6036153
	Head A: female connector, M12, 5-pin, straight, A-coded Head B: Flying leads Cable: Power, PUR, halogen-free, shielded, 5 m	YF2A64- 050XXXXLEAX	6036159
The state of the s	Head A: male connector, M12, 8-pin, straight, A-coded Head B: Flying leads Cable: Sensor/actuator cable, PUR, halogen-free, shielded, 5 m	YM2A28- 050UA6XLEAX	6036155
4 4	Head A: male connector, M12, 4-pin, straight, D-coded Head B: male connector, RJ45, 4-pin, straight Cable: Ethernet, PROFINET, PUR, halogen-free, shielded, 5 m	YM2D24- 050PN1MRJA4	2106184
Terminal and alignment brackets			
	Quick-action lock system for weather hood 190°/270°	Quick release	2046989

Recommended services

Additional services → www.sick.com/LMS1xx

	Туре	Part no.
Product, system, and software training		
 Range of services: The training contents relate to the following 2D and 3D LiDAR sensors: LMS series, MRS1000, MRS6000, NAV series or TiM series, Training format and location can be worked out in collaboration with SICK 	Training LMS/MRS/NAV/TiM	1612234
Commissioning		
 Product area: 2D LiDAR sensors, 3D LiDAR sensors Range of services: Inspection of connection, fine adjustment, configuration of monitored areas, configuration and optimization of parameters of the LMS/MRS/NAV/TiM as well as tests, Setup of previously defined functions of basic settings, parameters of field application, filters for raw data output and product-specific configuration Travel expenses: The prices do not include travel costs such as hotel, flight, travel time and expenses. Duration: Additional work will be invoiced separately 	Commissioning LMS/MRS/ NAV/TiM/LRS (Prime package)	1680672
Maintenance		
 Product area: 2D LiDAR sensors, 3D LiDAR sensors Range of services: Inspection, analysis and restoring of defined functions, Inspection and adaptation of basic settings, parameters of field application, filters for raw data output, and product-specific configuration Duration: Additional work will be invoiced separately Travel expenses: The prices do not include travel costs such as hotel, flight, travel time and expenses. 	Maintenance LMS/ MRS/NAV/TiM/LRS	1682593
Warranty extensions		
 Product area: Identification solutions, machine vision, Distance sensors, Detection and ranging solutions Range of services: The services correspond to the scope of the statutory manufacturer warranty (SICK general terms and conditions of purchase) Duration: Five-year warranty from delivery date. 	Extended warranty for a total of five years from delivery date	1680671

SICK AT A GLANCE

SICK is one of the leading manufacturers of intelligent sensors and sensor solutions for industrial applications. A unique range of products and services creates the perfect basis for controlling processes securely and efficiently, protecting individuals from accidents and preventing damage to the environment.

We have extensive experience in a wide range of industries and understand their processes and requirements. With intelligent sensors, we can deliver exactly what our customers need. In application centers in Europe, Asia and North America, system solutions are tested and optimized in accordance with customer specifications. All this makes us a reliable supplier and development partner.

Comprehensive services complete our offering: SICK LifeTime Services provide support throughout the machine life cycle and ensure safety and productivity.

For us, that is "Sensor Intelligence."

WORLDWIDE PRESENCE:

Contacts and other locations -www.sick.com

