# **Duro User Manual**

**Revision 3** 

2021-12-14





# **Table of Contents**

Notice to Users	4
Industry United States Statement	4
FCC Statement	4
Industry Canada Statement	4
Industry Canada Compliance	4
Conformité d'Industrie Canada	4
Industry European Union Statement	4
California Proposition 65	5
Japan	5
Когеа	5
Antenna Placement Guidelines	6
Limited Warranty Terms and Conditions	7
Product Introduction	7
Overview	7
Why Duro?	7
Centimeter-Level Accuracy	7
Easy Integration	7
Leverages Piksi Multi	7
Features and Benefits	7
Technical Information	8
Physical and Environmental	8
Enclosure	8
Connectors	10
Power Connector	11
Ethernet Connector	12
Serial Connector	13
AUX Connector	16
GNSS Antenna Connector	19
Standards and Certifications	20
Environmental Testing	21
Shock	21
Vibration	21



Temperature	21
Ingress and IP67	21
EMI/EMC	21
Mounting Duro Antenna	22
With Top-Mounted GNSS Antenna	22
Grounding Duro	25
Power	26
Interfaces	27
LED Indicators	27
Serial Ports	28
AUX	28
GNSS Tracking	28
Accuracy	29
Connecting to Duro	30
Ethernet Connection	30
Serial Connection	32
Firmware Upgrades	33
Swift Console	33
Swift Navigation Technical Support	35
Support Site	35
Supporting Tools	35
Contact Us	35



## **Notice to Users**

## **Industry United States Statement**

#### **FCC Statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Maximum antenna gain is limited to 5.29 dBi for the GSM 850 frequency band, 4.02 dBi for the PCS 1900 frequency band and 6.32 dBi for the FDD IV frequency band.

## **Industry Canada Statement**

#### Industry Canada Compliance

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

## Conformité d'Industrie Canada

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'exploitation est autorisée aux deux conditions suivantes

(1) l'appareil ne doit pas produire de brouillage

(2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

User instructions/antenna/etc.—see FCC section above.

## **Industry European Union Statement**

Swift Navigation hereby declares that Duro is in compliance with the essential requirements and other relevant provisions of the 2014/30/EU Directive and UN/ECE Regulation 10.

Duro is compliant with the European Community Restriction of Hazardous Substances Directive 2002/95/EC, (RoHS 1) and the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE) and is marked with the WEEE symbol and RoHS logo.



The symbol on the product or its packaging indicates that this product must not be disposed of with other household or office waste. Instead, it is the owner's responsibility to dispose of Duro waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about locations where Duro waste can be dropped off for recycling, please contact your local authority.


## **California Proposition 65**

WARNING: This product contains a chemical known to the state of California to cause cancer.

#### Japan

```
この装置は、クラスB情報技術装置です。この装置は、家庭環境で使用することを目
的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、
受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。
VCCI-B
```

Korea

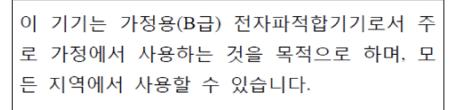






## **Antenna Placement Guidelines**

Position the antenna as indicated by the blue marker, at a spot with a sky view that is unobstructed above 30 degrees up from the horizon in every direction. For the best results, install the antenna on the top of a tripod (using the included threading adapter) or other stable structure.

Duro's high-precision, multi-band GNSS antenna is sensitive to its environment. Since Duro needs to track carrier phase information from GNSS satellites, it is much more sensitive to obstructions than standard consumer GNSS receivers found in, for example, smartphones. Thus, the Duro antenna must be kept away from any obstructions to its sky view.



- Do place the antenna on a tripod.
- Do not test inside a building.
- Do not place the antenna near buildings.
- Do not place the antenna near trees and other cover.
- Do not stand near the antenna or put your hand over the antenna during testing.
- Do not place an open laptop near the antenna so that the laptop itself is blocking the sky view.

Not indoor	Not near l	buildings	Not near trees
Not near people			Not near laptop



## **Limited Warranty Terms and Conditions**

Please, refer to the Swift Navigation website for information about product warranty information. <u>https://www.swiftnav.com/warranty-information</u>. Warranty is voided if Duro back access panel is opened.

# **Product Introduction**

### Overview

Duro<sup>®</sup> is a ruggedized version of the Piksi<sup>®</sup> Multi RTK GNSS receiver. Built to be tough, Duro is ideal for mining, agricultural, robotics, maritime and outdoor industrial applications. Duro is designed for integration into or mounting on top of existing equipment. With its cast aluminum housing, this easy-to-deploy GNSS sensor is protected against weather, moisture, vibration, dust, water immersion and the unexpected that can occur in outdoor long-term deployments.

## Why Duro?

#### Centimeter-Level Accuracy

Autonomous devices require precise navigation—especially those that perform critical functions. Swift Navigation's Piksi Multi module within Duro utilizes real-time kinematics (RTK) technology, providing location solutions that are 100 times more accurate than traditional GPS.

#### **Easy Integration**

Duro is easily integrated into your application as its sealed, and industry standard, connectors enable easy deployment in all conditions. The exposed interfaces support varied use cases without integration challenges.

#### Leverages Piksi Multi

Multiple signal bands enable fast convergence times and multiple satellite constellations enhance availability. Piksi Multi currently supports GPS L1/L2, GLONASS G1/G2, Beidou B1/B2 and GALILEO E1/E2. SBAS is also supported.

#### Features and Benefits

- Dual-frequency RTK GNSS, providing accurate position and solution fast recovery
- Tough, military-grade hardware
- IP67-rated enclosure with M12 standard-sealed connectors
- Raw IMU data stream output
- Future-proof hardware with in-field software upgrades



- Protected I/O, including RS232 Serial Ports, 100 Mbit Ethernet, Event Inputs, Pulse Per Second (PPS) and more
- Durable UV and chemical-resistant powder-coating
- Multiple mounting interfaces

# **Technical Information**

## **Physical and Environmental**


The following outline provides an overview of the physical and environmental aspects of Duro.

## Enclosure


The Duro ruggedized enclosure offers a series of mounting options, making it flexible to adapt to your mounting requirements:

- Pin Holes/Slots
- ¼-20 Thread Insert
- Threaded Mounting


The following section showcases Duro enclosure measurements. All measurements are in millimeters

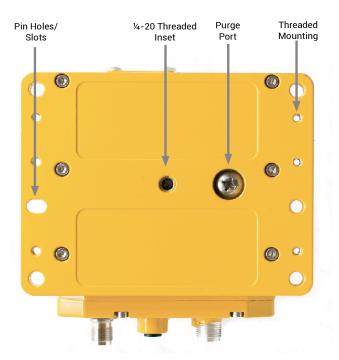



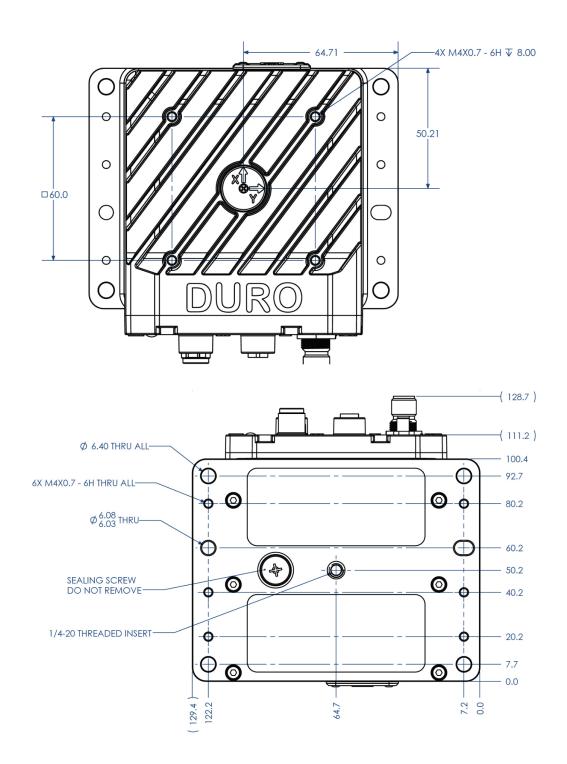



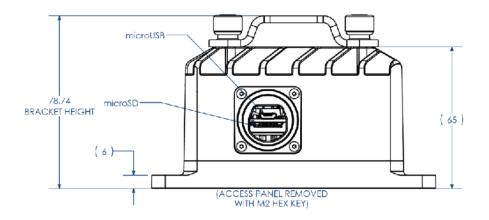


## Connectors

Duro's M12 connectors are sealed and industry standard, which balances ruggedization perfectly with user-friendliness. No external sealing is required to deploy Duro, in even the harshest conditions. Duro has the following connectors:

- Power
- Ethernet
- Serial
- AUX
- GNSS Antenna

The sections that follow explain the signal description for each connector and the cables provided with the Duro Evaluation Kit. Importantly, the connectors or their respective caps need to be mated to provide sealing functionality to meet IP67 standards.



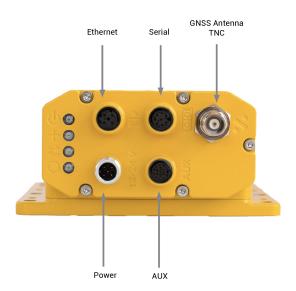

#### **Power Connector**

The power connection provides power input to Duro from a DC source. It also provides a chassis ground pin and digital input and output.

#### M12-A/M: Duro M12 5 Pin Male Connector, A Keying




M12 Pin F	Name	Description	Туре	Minimum	Typical	Maximum	Units
1	Vin	Voltage Input (Refer Power Section)	Input	10	12 - 24	35	V
2	Chassis_ GND	Signal Internally Connected to Duro Chassis		-			
3	GND	Power Ground	GND				



4	PPS	Pulse Per Second digital signal synchronized with GPS second	Output		5		V
5	EVENT_A	Event A Input Signal, reported as pin 0 in the SBP EXT EVENT message	Input	3.3	5	Vin	V

#### Evaluation Kit Power Cable (Part#90-M12A5F\_DCJ-08-X1) Description

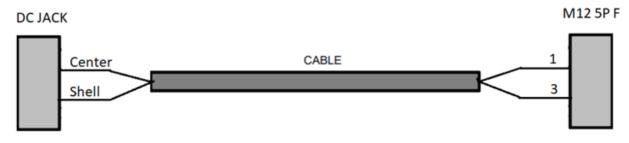

M12 5P (Male)	DC Jack	Name	Туре	Color	Description
1	Center	Vin	Input	Black	Voltage Input 10-35 V
3	Shell	GND	GND	White	Power Ground

# Ethernet Connector

The Ethernet connector is provided as the de-facto standard for industrial Ethernet with M12 circular connectors. There are many off-the-shelf cables available to mate with this connector. For reference, the mating cable provided with the Duro Evaluation Kit is provided below.


#### M12-D/F: Duro M12 4P Female Connector, D Keying





M12 Pin F	Name	Description	Туре	Minimum	Typical	Maximum	Units
1	TX+	Ethernet TX+	Output			2.5	V
2	RX+	Ethernet RX+	Input			2.5	V
3	TX-	Ethernet TX-	Output	-2.5			V
4	RX-	Ethernet RX-	Input	-2.5			V

#### Ethernet Cable (Part#90-M12D4M/R8-08) Description

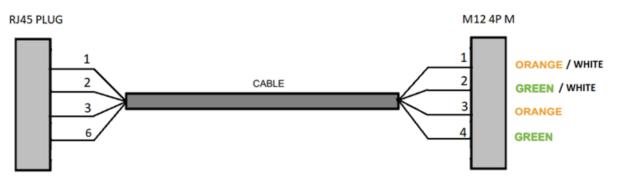

M12 5P (Male)	RJ45 PLUG	Name	Туре	Color	Description
1	1	TX+	Output	Orange/White	Ethernet TX+
2	3	RX+	Input	Green/White	Ethernet RX+
3	2	TX-	Output	Orange	Ethernet TX-
4	6	RX-	Input	Green	Ethernet RX-

#### Serial Connector

The serial connection cable is provided to allow serial communication to downstream devices. This connector can also provide 12 volt power output for downstream devices such as radio modems. The intention is that one cable mated with this connector can provide power and data communications to a serial modem for some applications. Note, the serial connection on this connector corresponds to UARTO on Piksi Multi, which



under default settings is configured to provide only the SBP messages required to use Piksi Multi as a base station.

#### Duro M12 8P Female Connector


M12 A code Pin (female)



M12 Pin F	Name	Description	Туре	Minimum	Typical	Maximum	Units
1	тх	UARTO Transit Asynchronous Data Output	Output	-5	+/-5	5	V
2	RX	UARTO Receive Asynchronous Data Input	Input	-25	+/-5	25	V
3	СТЅ	UARTO Clear to Send Control Input / Handshake Signal	Input	-25	+/-5	25	V
4	Event C	Event C Input Signal, reported as pin 2 in the SBP EXT EVENT message	Input	3.3	5	Vin	V
5	GND	Device Ground Supply	GND				
6	12V OUT	12 Volt Power Output (+- 10% Depending on Vin)	Output	10.8	12	13.4	V
7	PPS	Pulse Per Second Digital Output	Output		Vin		V
8	RTS	UARTO Request to Send Control Output / Handshake Signal	Output	-5	+/-5	5	V



#### Serial Cable (Part#90-M12A8M/D9F-06) Description

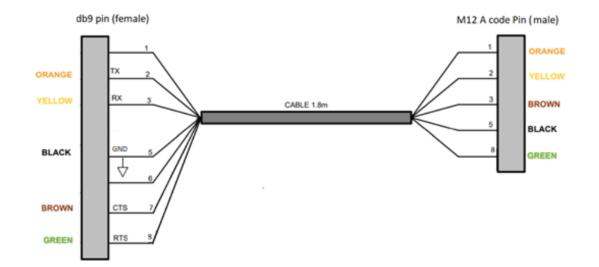


M12 Pin (Male)	Db 9 Pin (Female)	Name	Туре	Color	Description
1	2	тх	Output	Orange	Transit Asynchronous Data Output
2	3	RX	Input	Yellow	Receive Asynchronous Data Input
5	5	GND	GND	Black	Device Ground Supply
3	7	СТЅ	Input	Brown	Clear to Send Control Input / Handshake Signal
8	8	RTS	Output	Green	Request to Send Control Output / Handshake Signal



#### **AUX Connector**

The AUX connection on Duro is intended to be used for more full-featured applications on the device. It provides serial and additional digital inputs and outputs. It also provides both 12 Volt and 5 Volt power output for downstream devices.

#### M12-A/F (Duro M12 17P Female Connector, A Coded)

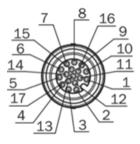


M12 Pin F	Name	Description	Туре	Minimum	Typical	Maximum	Units
1	CAN_L	CAN1_L	I/O	0.5	0.9	1.65	V
2	+5V Out	5 Volt Power Output (0.25A Max)	Output		5		V
3	RTS	UART1 Request to Send Control Output / Handshake Signal	Output	-5	+/-5	5	V
4	CTS	UART1 Clear to Send Control Input / Handshake Signal	Input	-25		25	V
5	+12V Out	12 V Power Output at 1 A Max (+- 10% Depending on Vin)	Output	10.8	12V	13.4	V
6	GND	Ground for 12 or 5 V output	Output				



7		RESERVED					
8		RESERVED					
9		RESERVED					
10	ТХ	UART1 Transit Asynchronous Data Output	Output	-25	+/-5.5	25	V
11	RX	UART1 Receive Asynchronous Data Input	Input	-25		25	V
12	CAN_H	CAN1_H	1/0	2.15	2.9	3.3	V
13	PPS	Pulse Per Second Output	Output		Vin	Vin	V
14	GND	Ground for 12 or 5 V output	Output				
15		RESERVED					
16	DI / Event B	Event B Input Signal, reported as pin 1 in the SBP EXT EVENT message	Input	3.3	5	Vin	V
17	DO / PV	Position Valid Digital Output	Output			Vin	V



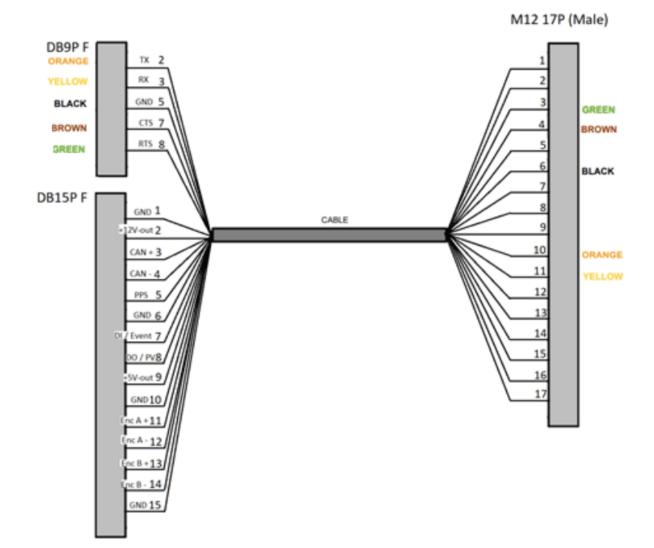

#### AUX Cable (Par#90-M12A17/09+15-03) Descriptions



M12 17P M	DB9 F	DB15P F	Name	Туре	Color	Description
1		4	CAN_L			CAN1_L
2		9	+5V-Out	Output		5 V Power Output
3	8		RTS	Output	Green	
4	7		CTS	Input	Brown	
5		2	+12V-Out	Output		12 V Power Output
6	5		GND		Black	
7		14		N/A		
8		12		N/A		
9		11		N/A		
10	2		тх	Output	Orange	UART1 Transit Asynchronous Data Output
11	3		RX	Input	Yellow	UART1 Receive Asynchronous Data Input
12		3	CAN +		N/A	CAN_H
13		5	PPS	Output	N/A	Pulse Per Second Output
14		1+6+10+15	GND	GND	N/A	Device Ground Supply
15		13				
16		7	DI / Event B			
17		8	DO / PV			

# 



A TNC female connector is provided to connect GNSS antennas to Duro. Active antennas are required for Duro operation and the 4.8 V 100 mA maximum current antenna bias is software enabled. Active antennas with an LNA gain between 28 dB and 45 dB are recommended.



## **Standards and Certifications**

Duro and typical cabling have been verified to be compliant with applicable regional standards for radiated emissions:

- IEC 60950-1
- IP67
- FCC Part 15B
- ICES-003
- 2014/30/EU Directive
- UN/ECE Regulation 10
- The European Community Restriction of Hazardous Substances Directive 2002/95/EC, (RoHS 1)
- Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE)
- VCCI-B
- KCC
- Australia TBD
- New Zealand TBD





#### **Environmental Testing**

Duro has been extensively tested by Swift Navigation, Carnegie Robotics and third parties to meet rigorous standards. A brief description of the test regimen is below. For more information about testing and test reports, please contact Swift Navigation.

#### Shock

Duro has been tested to withstand 40G and 65G shock. Duro was subjected to 3 positive and 3 negative half-sine shock pulses at 40Gs over 15-23 minutes. Duro was subjected to the UUT that included 3 positive and 3 negative shock pulses at 65Gs over 8 minutes. The Duro device survived all shocks to which it was subjected.

#### Vibration

To verify vibration testing, Duro was subjected to 7.7 G root mean square (rms) per the MIL-STD-810 Minimum Integrity Test Specification for 60 minutes per axis. The device was also subject to 5 G sinusoidal vibration in a test according to common methods. During the sinusoidal vibration test, Duro was subjected to Sine Sweep Vibration at 5 G Peak from 10 Hz to 2 kHz with a sweep rate of 0.25 oct/min. Duro navigated and operated before, during and after all vibration tests with no faults and little degradation of navigation performance.

#### Temperature

Operating temperature ranges have been verified from -40 to +75 degrees centigrade.

#### Ingress and IP67

Duro has been verified to meet Ingress Protection (IP) level 67, meaning it is impervious to dust and able to withstand submersion in up to 1 meter of water for 30 minutes.

#### EMI/EMC

Duro and typical cabling has been verified to be FCC part 15 compliant with respect to radiated emissions and susceptibility to interference.




## **Mounting Duro Antenna**

The following section will illustrate two scenarios in which Duro antennas can be mounted and deployed.

With Top-Mounted GNSS Antenna



Duro comes with a top-mounting GNSS antenna bracket that is easy to install. The following images describe the installation steps, measurements and technical names for the mounting parts.

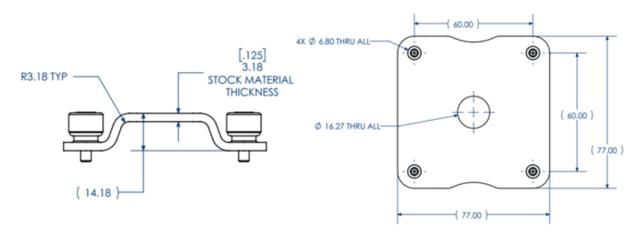



1. The following kit parts are required for GNSS antenna mounting on the top of Duro:



- a. Duro
- b. Top Mounting Base
- c. GNSS Antenna
- d. GNSS Antenna Cable
- e. Antenna Mounting Screw
- f. TNC-M to SMA-F Adapter
- g. TNC L Adapter






2. Proceed to put together the GNSS antenna with the mounting base.

Attach Antenna to Bracket

- a. Obtain GNSS antenna, <sup>5</sup>/<sub>8</sub>" x 11 screw and antenna bracket.
- b. Thread black <sup>5</sup>/<sub>8</sub> x 11 screw into antenna through mounting bracket.
- c. Thread right angle TNC adapter onto antenna.
- d. Mount antenna bracket on Duro with thumb screws.



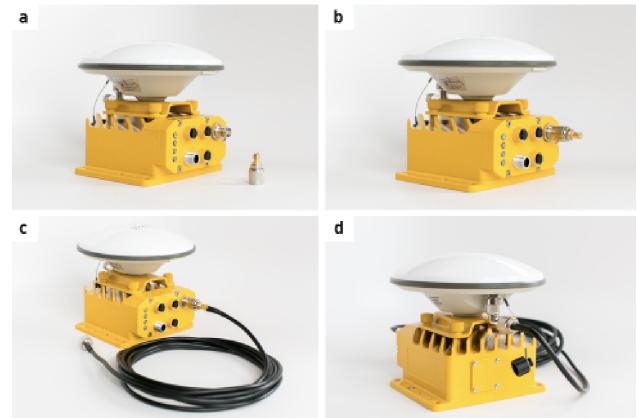

3. Connect the TNC-M to SMA-F Adapter to Duro and then the GNSS antenna cable.

Connect Antenna to Duro

- a. Obtain TNC-SMA adapter and antenna coaxial cable.
- b. Attach TNC-SMA adapter to Duro.
- c. Attach SMA side of coaxial cable to Duro.
- d. Attach the TNC side of the coaxial cable to the antenna. Stow excess antenna cable.

Long GNSS Antenna Cable

Duro Starter Kit comes with a 4 m (13') GNSS antenna cable allowing connection of the antenna away from the Duro.

## **Grounding Duro**

We highly recommend grounding of the chassis either at the m4 screw or through the chassis pin in the power cable. Grounding of the chassis is required to ensure safety and RF performance.



## Power

The following section presents the minimum and maximum power range for Duro. This section is subdivided into "Input" and "Output" sections, to make clear from where to obtain or provide energy. Duro requires a minimum of 5 watts of power for its own operation. When powering Duro, ensure the power supply can meet Duro's power requirements plus the power requirements for any downstream devices powered by Duro's outputs.

Input	Range	Notes
Input Voltage Range	10 V to 35 V	<ol> <li>The recommended voltage range is 12 to 24 V. Duro shuts down if the input voltage is below 10 V to prevent battery drain. At 10 V Swift Navigation cannot guarantee that the output voltage will be met for other interfaces or applications. Duro will also shut down if a voltage higher than 35 V is applied.</li> <li>Duro is equipped with a reverse polarity protection circuit.</li> <li>Power ground is connected to the chassis internally.</li> </ol>


Output	Voltages
Aux Connector	5 V - 0.25 A (1.25 W)
	12 V - 1 A (12 W)
Serial Connector	12 V - 1 A (12 W)



## Interfaces

#### **LED** Indicators

The LEDs are located in the front left side of Duro. The operation mode is described in the table below.

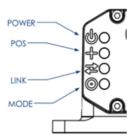

		LED D	escription
LED Name	Color	State	Description
POWER	LED Off	Off	No power or voltage outside range
	Green	Continuously On	Module receiving power
POS	LED Off	Off	No solution, antenna not detected, no GNSS signal received
	Yellow	Slow Blink	No solution, antenna detected, no GNSS signal received
	Yellow	Fast Blink	No solution, GNSS signal received
	Yellow	Continuously On	GNSS solution available (any kind)
LINK	LED Off	Off	No incoming corrections nor Internet access
	Red	Flashing	Incoming corrections, no Internet access
	Red	Continuously On	No incoming corrections, Internet access
	Red	Continuously On and Flashing (Occulting)	Internet access and incoming corrections
MODE	LED Off	Off	No RTK
	Blue	Blinking	Float RTK mode
	Blue	Continuously On	Fixed RTK mode



## **Serial Ports**

Duro comes with two serial ports, UART0 and UART1 respectively, that operate at RS-232 levels. UART1 is ready to be used by connecting the serial-USB cable from a computer to the AUX port cable (provided in the Duro Evaluation Kit).

Default Baud Rate 115200	Default Baud Rate	115200
--------------------------	-------------------	--------

By default, UARTO only sends SBP RTK corrections if Duro is configured as the base station. Enable UARTO for use with the Swift Console or other software through the settings interface by removing the message whitelist for the UART.

#### AUX

Both Serial Ports can be configured for different protocols, baud rates and with or without hardware flow control.

The Auxiliary Port provides connection to Duro through UART1 and CAN1 interfaces.

## **GNSS Tracking**

Duro currently supports dual frequency GPS/GLONASS/BEIDOU/GALILEO signals as seen below.

Constellation	Signal Bands			
GPS	L1 / L2C			
GLONASS	G1 / G2			
BEIDOU	B1 / B2			
GALILEO	E1 / E5b			



## Accuracy

Position, Velo	ocity and Time Accuracy	
Horizontal Position Accuracy (CEP 50 in SPP Mode)		2.5 m
Velocity Accuracy		0.03 m/s RMS
Time Accuracy		60 ns RMS
Real Time Kinematic (RTK Accuracy $1\sigma$ )	Horizontal	0.010 m + 1 ppm
	Vertical	0.015 m + 1 ppm
RTK Initialization Parameters	Initialization Time	< 10 s
	Initialization Reliability	>99%
	Solution Latency	<30 ms
Time to First Fix (TTFF)	Hot Start	< 7 s
	Cold Start	< 60 s
	Reacquisition	<2 s




## **Connecting to Duro**

### **Ethernet Connection**


#### Swift Console

- 1. Proceed to connect the Ethernet Cable from your computer to Duro. Set up a local IP as shown below:
  - a. IP Address: 192.168.0.10
  - b. Subnet Mask: 255.255.255.0

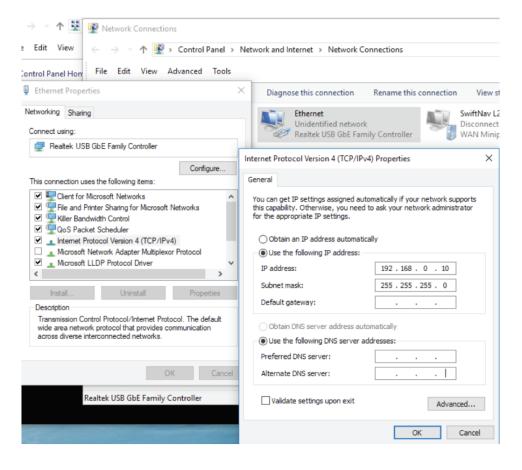



2. Ensure you can reach Duro from your computer. The default Duro IP Address is 192.168.0.222.

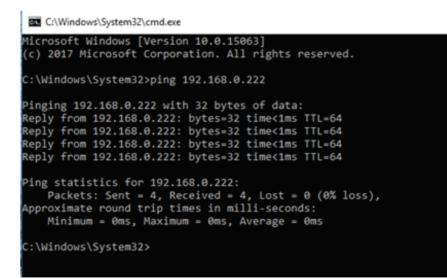


3. Open Swift Console by clicking on icon:





4. The Swift Console Connection Interface will pop up. Proceed to select TCP/IP and then click "OK".

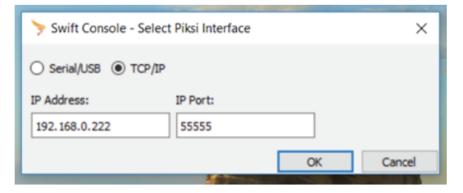

5. It can take up to 90 seconds to acquire a signal(s). The "Tracking" Tab confirms the signals Duro has acquired:

> 192.168.0.222	55555/PK00						- 0	×
Techng Soluti	on Basele	e Observa	tions Settings	Fernware Update	e Advanced			
				Tracking C	/N0			
								60
							2	50
		_				-		
	8 2 (253	1638						40 94
		83. I						Ŧ
		89) I						30
	89999	834						
		HEAR					1	20
-80		-60		-40	-20	0		
				seconds				
Show Legend: 🗹	Show L1:	🛛 Show Li	: 2					
II × Console I	Leg carle	350N log	C:/Liters/perg/	Switther		📙 Log lev	el fiter: WAR	NONG
Host timest	amp	Log level			Message			
ul 17 2017 1		CONS				modem_type and gr	oup is cell	_mo.
lul 17 2017 1		CONS		ettings loaded				
ul 17 2017 1					rom path setting	ps.yaml		
ul 17 2017 1	7:48:33	CONS	Console: 1.1	.G starting				
Interface: 192.3	(8 A 333-666	IS STATUTE	100 minter 15 1	lana latencar -				-
Interface: 192.9	68.0.222:555	SS PER TYPE	97 #Sets: 30 1	lase Latency: -				- 1

## **Serial Connection**

Duro comes with two Serial ports, one enabled by default (UART1) and the other one requires configuration to be used (UART0).

Proceed to connect the Serial-USB adapter between your computer and Duro. Ensure this connection is being made through the Serial port 1, located in the Auxiliary port (Duro AUX cable recommended).



# **Firmware Upgrades**

## Swift Console

Please proceed to execute the following steps:

1. You should be able to see information in the Swift Navigation Console Tracking tab:

7 192.10	NB 0.222-555555(PK000	135) Swift Co	nsole v:1.1.G			-	0 X
Trading	Solution Baselin	e Observal	tions Settings	Firmware Update	Advanced		
				Tracking C/N	o		
Γ							
							- 50
	= 8 8 9383	828					40 0
		[3]					품
		849 I					- 10
	<u>=3185</u>						1.0
	— S 1(200)	83					
		683					- 29
5	80	-60	-40		-30		
	~			seconds			
Show Leg	end: 🖂 Show Lit (	Show 12	R				
	sessie Log CSV log		C:Userslaergide	and the second se		Log level fitter	
			C. Post the Most			La Lagreve mer	- merena -
	t timestamp	Log level			Message		
	017 17:48:34 ( 017 17:48:34 (					idem_type and group	is cell_mo
					path settings.ya	end .	
			Console: 1.1.G				
Interface	192. 168.0. 222:5585	S FIX TYPE :	579 #Sats: 10 Ba	se Latency: -			4

2. Go to the Firmware Upgrade tab, Select the Binary File to be uploaded into Piksi Multi and click Upgrade FW.

Taking	10.222.553550 Solution	in the second second	Observe	dana di	ettings	Femalere	1 March 1	Advance	and its					
	vision: pilot m		CASE V	1005 0	ennille	11000	CQADRIN .	Autors	.eu					
Firmare V							- Swift Can	sole lie	reion					
Current:	v1.1.100-12						Currents	12.2.2	6					
	v1.1.27						Latest							
					- 1	10. 1	erring i	-	×					
LOCA FIRE	PRoMUNITY 1.1	100-12-56	n			NO Hansa	enny		^					
Update P	100													
Bases the	ose a directory	for descelo	adad firms	unce files					40					
riesese uno	one a oriectory				_	_		_	_					
						Download La		1						
Tansferri	ng image file													
		SV log	7500 km	C/Die	sisergili						Leg l	evel fitter	WAD	01
II × 6	modelog c	-		Criuter	sisergilj				bless		Log I	evel filter		
II X G	molelog c	te	ng level				tation en	tou foo	Mesu				-	
II × Ce Host Jul 17 20	modelog c	4 CO	ig level NS	No sett	ings d					e e modem_:			-	
H × G Host Jul 17 20 Jul 17 20	made Log o timestamp )17 17:48:3	4 C0	ig level NS	No sett Numbe Loaded	ings d r of settir	locument ettings lo	aded 134 file from	ŧ.	r nam	modem_			-	
H × G Hort Iul 17 20 Iul 17 20 Iul 17 20	made Log c timestamp )17 17:48:3 )17 17:48:3	4 C0 4 C0 4 C0	ng level NS NS	No sett Numbe Loaded	ings d r of settir	locument ettings lo	aded 134 file from	ŧ.	r nam	modem_			-	
H × G Hom Iul 17 20 Iul 17 20 Iul 17 20 Iul 17 20	made tag c timestamp )17 17:48:3 )17 17:48:3 )17 17:48:3	4 CO 4 CO 4 CO 3 CO	ng level NS NS NS NS	No sett Numbe Loaded Console	ings d tr of si I settir e: 1.1.4	locument ettings lo ngs yaml G starting	aded 134 file from 3-	ŧ.	r nam	modem_			-	



3. An "Upgrade Completed" message will be shown and your Duro will restart. Then close your Swift Console.

macang.	Solution Basely	ne Obse	rvations Settings	Formware Update	Advanced					
ardvare Re	man places									
Fermine's	Version				Swift Cor	sole Version				
Oument.	v1.1.109-12				Current	v1.1.13.dex33~pr0edx8				
Laborat:	vi.1.22				Laborat	Latest: (H.1.6				
Local Pliec	PK4PM-VL1.100-1	2.bm								
Update	PW									
Please cho	one a directory for dov	inicaded firm	ware files							
				Dow	food Latest Fermus					
ak (* 1	427 0x00000000 - 0x00									î
ek uniting mi ek uniting mi ek uniting mi ek	427 0x0003130 - 0x00 424 0x000000 - 0x00 425 0x00000000 - 0x00 completed successfully	0040ea 012740								c
ak uniting int ak uniting int ak upprate i Rasetting	427 0x0003130 - 0x00 424 0x000000 - 0x00 425 0x00000000 - 0x00 completed successfully	0040ea 0ca?eb 0c0900	Crownbergideet	tar				🔒 Log level fill	ari 184	o dec
al uniting rel al uniting rel al spyrade c Resulting II × Car	457 0x00009330 - 0x00 684 0x000x000 - 0x00 453 0x000x0000 - 0x00 completed successifully PRot	0040ea 0ca?eb 0c0900		theor		Message	]	Log level fill	wi 184	
ak uniting mi ak uniting mi ak uniting kuniting kuniting	427 bublichij 40 - bubli Alf bublichij 00 - bubli 40 bublichij 00 - bubli 40 bublichij 00 - bubli completed successfully Max	0040es 002740 002990 5508 keg Log k	rvel	tiev a command ret	ponse messa			Log level fill	leri (1834	
ek writing m ek writing m ek epymer o Resetting Ho UI 18 20	ez? belokotki ko - belo bit belokotki - belo ezi belokotki - belo completel successfully Pike soole tog cstrikg out Smestamp	BHORS Orafina Orafina BOBI log Iv Log Iv CONS	out Received	a command ret			and group is cell		art (1884)	odec
ek untang mi ek untang mi ek untang mi ek untang mi ek untang mi ek untang mi ek untang mi ek untang mi ek untang mi ek untang mi ek untang mi ek untang mi ek untang mi ek untang mi ek untang mi ek untang mi ek untang mi ek untang unt	etr extension - twee all betrouter - twee atto betrouter - twee atto betrouter - twee completed successfully Plas assist Log catving out timestamp 017 11:05:40	BH0m Control Boom long Long In CONS CONS CONS	OLE Received OLE No settin OLE Number	a command ret	ion entry for r ed 134	ge with code 0 same modem_type a	and group is cell		teri (1834)	

4. Connect again to the Swift Console and go to the Firmware Update tab. Verify the firmware version.

Tracking	Solution	Baseline	Observations	Settings	Firmware Update
lardware Re	vision: piksi,	,multi			
Firmware V	/ersion				
Current:	v1.1.100-12				
Latest:	v1.1.27				
Local File:	Please choos	se a file			
Update F	FW				



# **Swift Navigation Technical Support**

## **Support Site**

Further Swift product support information is available at <u>support.swiftnav.com</u>. The support site also allows Duro users to get in touch with Swift technical support and to ask public questions to the community.

Specifically, the following support documents are useful for integration support of Duro.

Additional Support Documentation	
Name	Description
Swift Binary Protocol (SBP)	Support information for Duro and Piksi Multi native on-the-wire communication protocol.
Firmware Settings Manual	Information about all of the configuration options exposed for Duro's firmware.

## **Supporting Tools**

Additional Support Tools	
Name	Description
<u>Swift Console</u>	Support information and download of the Swift Console, the Graphical User Interface (GUI) for test and evaluation of Duro.
<u>sbp2rinex</u>	Cross platform command line utility for converting raw SBP log information to the Receiver Independent Exchange format (Rinex).

## **Contact Us**

Swift Navigation, Inc. 201 Mission Street, Suite 2400 San Francisco, CA 94105 swiftnav.com/contact-us