
LORD USER MANUAL

3DM[®]-GX5-15

Vertical Reference Unit (VRU)





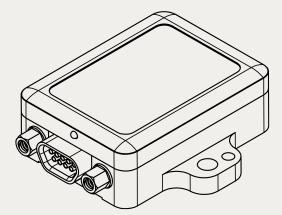

MicroStrain[®] Sensing Systems 459 Hurricane Lane Suite 102 Williston, VT 05495 United States of America

Phone: 802-862-6629

www.microstrain.com sensing_support@LORD.com sensing_sales@LORD.com

Copyright © 2017 LORD Corporation

3DM[®], 3DM-DH[®], 3DM-DH3[®], 3DM-GX2[®], Ask Us How[™], DEMOD-DC[®], DVRT[®], EmbedSense[®], FAS-A[®], G-Link[®], Little Sensors, Big Ideas.[®], LORD Microstrain[®], Live Connect[™], LXRS[®], MathEngine[®], MicroStrain[®], MXRS[®], Node Commander[®], SensorCloud[™], SG-Link[®], Strain Wizard[®], TC-Link[®], V-Link[®], Wireless Simplicity, Hardwired Reliability[™], and WSDA[®] are trademarks of LORD Corporation.

Document 8500-0061 Revision C

Subject to change without notice.

Table of Contents

1.	System Family Overview	
2.	Sensor Overview	7
2	2.1 Components	8
2	2.2 Interface and Indicators	
3.	Basic Setup and Operations	
3	3.1 Software Installation	
3	3.2 System Connections	
3	3.3 Software Interface	
	3.3.1 Interactive Help Menu	
3	3.4 Sensor Communication	
3	3.5 Sensor Settings	
	3.5.1 Saving Configurations	
3	3.6 Data Monitoring and Recording	
3	3.7 View Recorded Data	
4.	Sensor Measurements	
Z	4.1 Direct Sensor Measurements (IMU Outputs)	21
Ζ	4.2 Computed Outputs	
Ζ	4.3 Sensor Reference Frames	
	4.3.1 Geodetic Frame	
	4.3.2 North East Down (NED) Frame	
	4.3.3 Sensor Frame	
5.	Performance Optimization	
5	5.1 Gyroscope Bias	
5	5.2 Estimation Filter Aiding	
5	5.3 Heading Aiding Settings	



5.3.1 Bias Convergence	
5.4 Adaptive Anomaly Rejection	
5.4.1 Gravity Adaptive	32
5.5 Angular Rate and Acceleration Limits	
5.6 Communications Bandwidth	
5.7 Estimation Filter Operation	
5.8 Estimation Filter Convergence	
5.8.1 Initial Convergence	
5.8.2 Output Uncertainty	34
5.9 Vibration Isolation	
5.10 IMU Sensor Calibration	
5.11 Temperature Compensation	
5.12 Import and Export Settings	
6. Sensor Installation	
6.1 Sensor Mounting	
7. OEM System Integration	
7.1 Data Communications Protocol (DCP)	
7.1.1 Packet Builder	
7.1.2 Sensor Direct Mode	
7.2 Sensor Wiring	40
7.3 Sampling on Start-up	41
7.4 Connecting to a Datalogger	
7.5 Using Wireless Adapters	
8. Troubleshooting	
8.1 Troubleshooting Guide	43
8.2 Repair and Calibration	



8.4 Maintenance	47
9. Parts and Configurations	48
9.1 Standard Configurations	48
9.2 Accessories	50
9.3 Sales Support	50
10. Specifications	51
11. Safety Information	53
11.1 Disposal and Recycling	53
12. Reference Diagrams	54
12.1 Sensor Dimensions and Origin	54
12.2 Power Supply Specifications	55
12.3 Communication and Power Cables	56
13. Reference Documents	58
14. Glossary	59



1. System Family Overview

The **LORD Sensing** 3DM-GX5 family of industrial-grade inertial sensors provides a wide range of triaxial inertial measurements and computed attitude and navigation solutions.

In all models, the Inertial Measurement Unit (IMU) includes direct measurement of acceleration and angular rate, and some also offer atmospheric pressure readings. In models that include a Kalman Filter, sensor measurements are processed through an Extended Kalman Filter (EKF) to produce highly accurate computed outputs. The 3DM-GX5 features include extremely stable and low-noise gyros, a new accelerometer with noise densities as low as $25 \,\mu g/\sqrt{Hz}$, and a multi-constellation GNSS receiver. The M7 and M4 dual Cortex processors run a new Auto-Adaptive EKF. The Kalman filter enables compensation for magnetic and linear acceleration anomalies as applicable to the model. It also provides sensor bias tracking, auto-zero update options (ZUPT), and user adjustable sensor noise factors. All sensors are fully temperature-compensated and calibrated over the full operating temperature range.

The use of Micro-Electro-Mechanical System (MEMS) technology allows for small, lightweight devices. Sensors are integrated into customer systems using serial communication protocols such as RS422, RS232 and USB. The LORD Sensing MIP Monitor software can be used for device configuration, real time measurement monitoring, and data recording. The LORD Sensing MIP Data Communications Protocol (DCP) that is used to communicate with LORD Sensing inertial sensors is also available for users who want to develop customized software solutions. Because of the unified set of commands across the sensor family, it is easy to migrate code from one inertial sensor to another.

Common applications of LORD Sensing inertial sensor products include vehicle health monitoring, platform stabilization, down-hole and drilling operations, and inertial navigation systems such as unmanned air and ground vehicles and personal navigation systems.





2. Sensor Overview

The 3DM-GX5-15 is a high-performance, industrial-grade Inertial Measurement and Vertical Reference Unit (IMU/VRU) that utilizes micro inertial sensors for use in a wide range of industrial-grade applications, such as platform stabilization and vehicle health monitoring platform stabilization, motion tracking and analysis, vehicle health monitoring, and device aiming.

The 3DM-GX5-15 combines the strengths of an integrated multi-axis gyroscope and accelerometer, in combination with pressure readings to provide highly accurate inertial measurements. All sensor measurements are temperature- compensated and are mathematically aligned to an orthogonal coordinate system. The combination of sensors, environmental compensation, and dual on-board processing with an Auto-Adaptive Extended Kalman Filter (EKF) allows the 3DM-GX5-15 to perform well in a wide variety of applications that require low noise, drift, gain, and offset errors.

The 3DM-GX5-15 communicates through a serial connection and is monitored by a host computer. Sensor measurements and computed outputs can be viewed and recorded with the LORD Sensing MIP Monitor software that is available as a free download from the LORD Sensing website. Alternatively, users can write custom software with the LORD Sensing open source data communication protocol. The data is time-aligned and available by either polling or continuous stream.



Figure 1 -3DM-GX5-15 Sensor



2.1 Components

The 3DM-GX5-15 Inertial Sensor can be purchased by itself or as part of a Connectivity Kit. All software, drivers, and links to detailed documentation are included with the sensor purchase. For a complete list of available configurations, accessories, additional system products, and ordering information, *see Parts and Configurations on page 48*.



ltem	Description	Model	LORD Sensing			
nem	Description	woder	Part Number			
Included with Sensor Purchase						
А	3DM-GX5-15 Inertial Sensor	VRU 8G, 300 DPS*	6254-4220			
	//www.microstraii	n.com/software				
	* For additional options available see Specifications on page 1					
	USB Connectiv	vity Kit				
В	USB Communication Cable		6212-3004			
RS232 Connectivity Kit						
	RS232 Communication Cable					
С	RS232 Power Supply and Plug Adapters		6212-3001			


Table 1 - 3DM-GX5-15 Components



2.2 Interface and Indicators

The 3DM-GX5-15 sensor interface includes a communications and power input connector. The sensor is installed using the mounting and alignment holes as needed (*see Sensor Mounting on page 1*).

The indicators on the 3DM-GX5-15 include a device status indicator and the device information label. The table below describes the basic status indicator behavior. The device information label includes the sensor frame diagram (axis orientation), which will be critical during device installation (*see Sensor Frame on page 28*).

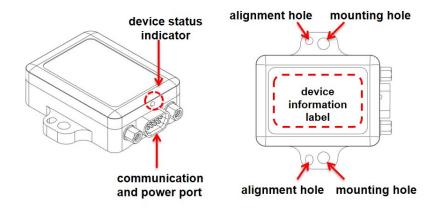

Indicator	Behavior	Device Status	
	OFF	no power applied	
device status	rapid flash	streaming data	
indicator	slow pulse	idle mode, awaiting	
	slow pulse	commands	



3. Basic Setup and Operations

To acquire sensor measurements and computed outputs, the 3DM-GX5-15 uses a host computer, an RS232 or USB communications port, and applicable software. The LORD Sensing MIP Monitor software is provided with the system and includes all functions needed for sensor configuration and data acquisition. Users may also utilize the LORD Sensing MIP Data Communications Protocol (DCP) to write custom software applications with expanded or specific feature sets needed for the application. MIP Monitor includes a message building tool that can be used to streamline this process. For more information, *see OEM System Integration on page 37*.

In this section, hardware and software setup is described, including an overview of the MIP Monitor software menus required to configure a sensor and begin data acquisition. This is not a complete demonstration of all system or software features and capabilities.

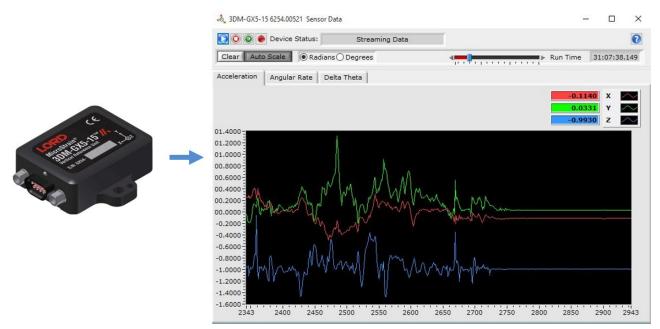


Figure 3 -Viewing Sensor Data with MIP Monitor



3.1 Software Installation

NOTE

The MIP Monitor Software Suite includes hardware drivers required for 3DM-GX5-15 sensor operation. Sensors will not be recognized without these drivers installed.

To Install the MIP Monitor software on the host computer, complete the following steps:

- 1. Launch the MIP Monitor software installation menu at: https://www.microstrain.com/software.
- 2. Download and open the MIP Monitor .zip file.
- 3. Run the **setup.exe** file, and follow the on-screen prompts to completion.
- 4. Download and open the Inertial Drivers zip folder to install the hardware drivers required for operating the sensor.
- 5. Run the .msi file, and follow the on-screen prompts to completion.
- 6. Run the **setup.exe** file, and follow the on-screen prompts to completion. If prompted, reboot the computer when complete.


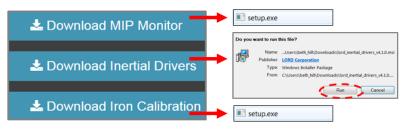


Figure 4 -Software Installation Menu



3.2 System Connections

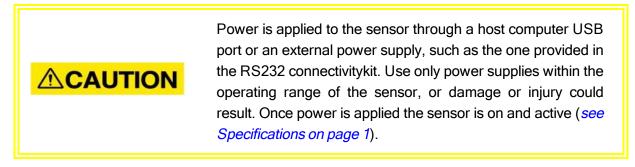

To acquire sensor data the following components are needed: 3DM-GX5-15 sensor, communication cable, power cable (as applicable for RS232 communications), and a host computer with LORD Sensing MIP Monitor installed.

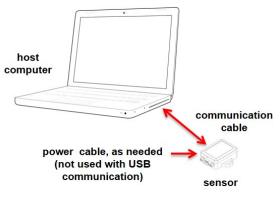


Figure 5 -System Connections

3.3 Software Interface

The MIP Monitor software includes a main window with system information and menus, a device settings window, and several data monitoring windows.

The main window provides an overview of connected devices. Devices are selected by clicking on them. A device menu is available by right-clicking on the device name and includes the most used items from the header row menus. The header row menu includes selections for data sampling, recording, device settings, opening windows, selecting which open window to view, and advanced features such as selecting the communications mode. The icon toolbar includes buttons for Help Menu access, where all related documentation is available in Web Resources, device refresh, and data sampling and recording.



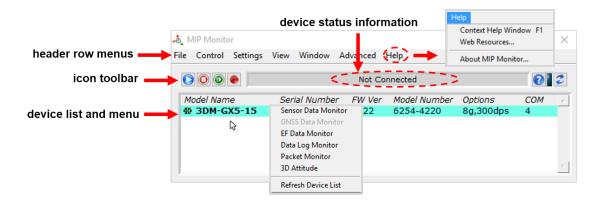


Figure 6 - Main Window Display

3.3.1 Interactive Help Menu

MIP Monitor also includes a mouse-over feature that provides explanations of the information and settings. This feature is enabled by selecting the question mark icon or Help button in any window.

. . . .

				enab	le help	menu	
& MIP Monitor				-		×	
ile Control Settings	View Window A	dvanced	Help		1		Context Help
		Not Co	nnected		0	2	Help
Model Name	Serial Number	FW Ver	Model Number	Options	СОМ	(×]	This button opens a context sensitive help window. The
- ∰ 3DM-GX5-15	6254.00521	1122	6254-4220	8g,300dps	4		window text changes as you move the mouse over the controls in the interface.
						<u></u>	

Figure 7 - Context Sensitive Help Menu

3.4 Sensor Communication

Once power has been applied to the sensor, it is functional. If the hardware drivers have been installed, communication can be established using the MIP Monitor software interface.

- 1. Verify the sensor device status indicator is on.
- 2. Open the MIP Monitor software.
- 3. The sensor should appear in the device list automatically when the software is running. The list includes the device information and communication port assignment. If the sensor is not automatically discovered, use the refresh button.



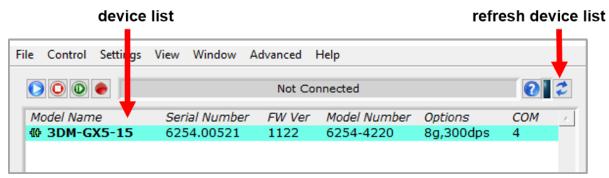


Figure 8 -Sensor Communication

NOTE

If data is not actively being exchanged between the sensor and host computer, the status message may display Not Connected. This indicates the port status, not the sensor availability. When commands are sent to the sensor, the software will automatically connect to it before sending the message.



3.5 Sensor Settings

Device settings are stored in the sensor memory. Only the configuration options available for the sensor being used are displayed in the menus.

To enter the settings menu, either right-click on the sensor name highlighted in the main window, and then select Device Settings, or select Settings > Device from the main menu.

- Main menu tabs: The main tabs divide the settings into functional groups for the available measurements. For the 3DM-GX5-15 these include calculated measurements (Estimation Filter) and direct inertial sensor measurements (IMU/AHRS).
- b. **Message Format (first sub-menu tab):** Under each main menu tab there are additional submenu tabs, including the Message Format tab, which allows the user to select the measurement type to be displayed and recorded (b1) and the data rate in samples/second(b2).
- c. **Measurement parameters:** Available sub-menu tabs depend on the selected main menu tab. They include the configurable settings for each measurement.
- d. Scrolling: used to navigate to additional sub-menus
- e. Help button: Enable the context-sensitive help menu for more information (*see Interactive Help Menu on page 13*).

		Not Co			
a		Number FW Ver e Settings 2			
the Device Letter		r Data Monitor			
Estimation Filter					
h		vity Adaptiv 🔌 🕨			
b1 Attitude (Euler RPY)	▼ 50 ▼ Hz ←	Set All To	b2		
	Device Setup			×	
Est	timation Filter IMU-AHRS				
c	CF Options	Low Pass Filter 1	Low Pass Fi	ilter 2 > Cor	d
				Set All To	
	Accelerometer Vector				
				Hz	
	Angular Rate Vector	√ 100	Hz	Hz	
	Angular Rate Vector Ambient Pressure	▽ 100 ▽ 100	 Hz Hz	Hz	
	-	▼ 100 ▼ 100 ▼ 100	Hz Hz Hz	Hz	
	-	▼ 100 ▼ 100 ▼ 100 ▼ 100 ▼ 100	Hz Hz Hz Hz		
	-	▼ 100 ▼ 100 ▼ 100 ▼ 100 ▼ 100	Hz Hz Hz	Hz	
	-	▼ 100 ▼ 100 ▼ 100 ▼ 100 ▼ 100	Hz Hz Hz Hz	Clear	е

Figure 9 -Device Settings Menu



NOTE

When selecting sensor and estimation outputs to be recorded, communications bandwidth considerations should be taken into account. Lower baud rates equate to lower communications bandwidth, which can be consumed quickly by selecting a large number of measurements at high sample rates. Overrunning the communications bandwidth will result in dropped communications packets and lost data.

3.5.1 Saving Configurations

Sensor settings are saved temporarily by selecting the OK button in the Device Setup window after configuration, but they are lost when the device is powered off. To save current settings, so they are automatically restored the next time the device is powered on, select Settings > Save Current Settings.

First adjust the sensor settings to the desired values. Next select Settings > Save Current Settings from the main window (*Figure 10 - Save Sensor Settings*). The settings will now remain intact when the sensor is powered off and then on again.

To recall the last saved settings select Settings > Load Startup Settings. To revert the settings back to the factory defaults, select Settings > Load Default Settings.

& MIP Monitor		
ile Control Set	tings View Window Advanced Help	
	Not Connected	22
Model Name	Serial Number FW Ver Model Number Options Device 24 6253-4220 8g,300dp	COM
	System	
	Capture Gyro Bias	
	Tare Mounting Pitch/Roll	
	Capture Auto Mag Cal	-
	Save Current Settings	

Figure 10 -Save Sensor Settings



3.6 Data Monitoring and Recording

NOTE
During viewing and recording, only the outputs that are selected in the Message Format tabs in the Device Setup menu are displayed and recorded (<i>see Sensor Settings on page 15</i>).

Throughout the MIP Monitor views the same icons are used to control data streaming (sampling) and recording. These icons can be found in the MIP Monitor main window icon toolbar and in each data monitoring window. The same commands are also found in the main window Control menu.

	and recording (main window)						
File	Control Settings	View Window A	dvanced	Help			
			Not Co	nnected		0	2
M	lodel Name	Serial Number	FW Ver	Model Number	Options	СОМ	1.4
-10	3DM-GX5-15	6254.00521	1122	6254-4220	8g,300dps	4	

Figure 11 - Main Window Controls

There are several data monitoring views available depending on what measurements are desired for monitoring and recording. Each view corresponds to one of the main categories in the Device Settings window. For example, the 3DM-GX5-15 includes Sensor Data Monitoring for the IMU/AHRS measurements and EF Monitoring for the Estimation Filter outputs. During viewing and recording only the outputs that are selected in the Message Format tab of the Device Settings menu are displayed and recorded (*see Sensor Settings on page 15*).

Data streaming must be started in order for data to be recorded, however it is not necessary to view it in a data monitoring window. Data monitoring is used primarily to confirm the system is operating correctly or to view the outputs in near real time. If sensor setup has already been confirmed, streaming and recording can be initiated from the main window.

Figure 12 - Data Streaming is an example of Sensor Data Monitoring, which displays the selected IMU/AHRS measurements. In data monitoring windows, no data will be displayed until data streaming is started, and no data will be recorded (even if it is being viewed) until data recording is initiated (armed). In the example below, the y-axis of the graph indicates data points, the x-axis is the measurement units, and there is a tab for each measurement.



- 1. Right-click on the device in the MIP Monitor software main window, and select Sensor Data Monitor.
- 2. Click the blue Start Streaming icon to start sampling.

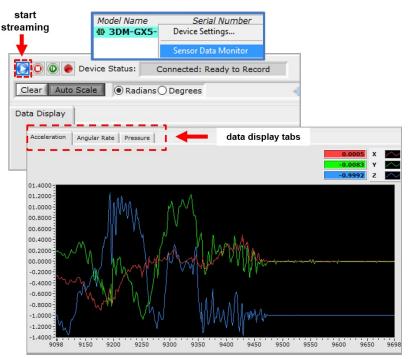


Figure 12 -Data Streaming


3.7 View Recorded Data

Recorded data is stored in either Binary (.bin) or Comma Separated Values(.csv) format, depending on what was selected at the initiation of data recording. The files can be found in the directory specified at that time or in the default directory on the host computer desktop.


CSV files can be viewed with Microsoft Excel, Quattro Pro, Open Office, or other CSV editors and spreadsheet programs.

Data recorded in Binary format requires a translation program utilizing the LORD Sensing MIP Data Communications Protocol (DCP) to make it user-readable.





- 1. To record data, select the Arm Recording icon at any time.
- 2. Select the type of data file to generate: Binary or CSV. The CSV file is the most common and can be viewed and processed by data editors such as Microsoft Excel.
- 3. To save a settings file when creating a data file, check the box next to this option. This settings file is the same as selecting Export Settings from the Settings menu.

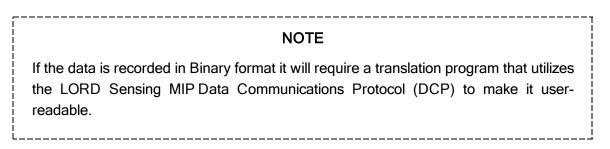

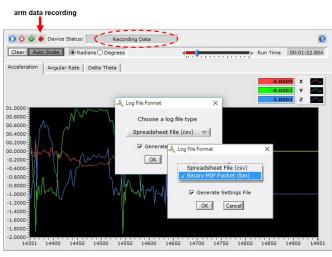


Figure 13 -Data Recording

- 4. To end recording press the Arm Recording button again, and select OK in the confirmation prompt window.
- 5. Select the Stop Streaming icon to end sampling.
- 6. Use the red "X" in the upper right of the sensor monitoring window to exit monitoring mode.



4. Sensor Measurements

The 3DM-GX5-15 block diagram (*Figure 14 - 3DM-GX5-15 Block Diagram*) describes its primary hardware components and internal configuration. Integrated Micro-Electro-Mechanical System (MEMS) sensors within the 3DM-GX5-15 are collectively known as the Inertial Measurement Unit (IMU) and include tri-axial gyroscopes (gyros), tri-axial accelerometers and a pressure altimeter. This technology provides direct measurements of acceleration, angular rate, pressure, Delta-theta (change in angular rate), and Delta-velocity (change in velocity). Temperature and pressure sensors provide environmental information for measurement compensation and altitude estimations. information can be read directly but is not used internally for attitude or navigation estimations on the 3DM-GX5-15.

Computed estimations for attitude, acceleration, angular rate, and heading are available outputs on the 3DM-GX5-15. To achieve these estimations, the MEMS sensors are processed by an IMU Estimation Filter (EF) microprocessor with an Adaptive Kalman Filter (AKF). Additional user settings such as measurement filtering, biasing, and tolerance values offer adjustments for specific applications.

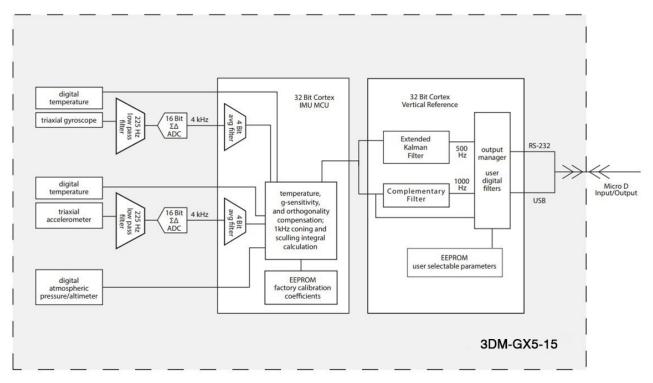


Figure 14 -3DM-GX5-15 Block Diagram



4.1 Direct Sensor Measurements (IMU Outputs)

The sensors in an Inertial Navigation System (INS), from which measurements for navigation and orientation are obtained, are collectively known as the Inertial Measurement Unit (IMU). These sensors are arranged on the three primary axes (x, y, and z) to sense angular rate acceleration. The gyroscopes are used to adjust the current attitude estimate when an angular rate is sensed. The accelerometers sense gravity as well as linear acceleration. All measurements are temperature-compensated and are mathematically aligned to an orthogonal coordinate system.

The IMU sensors can be read directly to report stand alone inertial measurements or computed measurements. Because the sensor system is digital, the analog voltage readings from the sensors are converted into a digital equivalent value based on the volt-to-bit scale of the internal analog-to-digital voltage converter. In the MIP Monitor software the conversion values are not configurable, but there are user-settable options for how the measurement is made. These settings are available at: Settings > Device > IMU (tab). With the Help window open (accessed with the Help button), mousing over context-sensitive settings provides a detailed explanation of the setting (*Figure 15 - IMU Settings*).

Device Setup Estimation Filter IMU-AHRS Message Format EF Aiding E	Capture Au	ted del Number	p Options SG,300DPS	
Attitude (Euler RPY)	vice Setup	Set All To	Filter 2 >Cor 4	Context Help Help
	Accelerometer Vector		Set All To	This button opens a context sensitive help window. The window text changes as you
	Ambient Pressure	▼ 100 ▼ Hz ▼ 100 ▼ Hz ▼ 100 ▼ Hz		move the mouse over the controls in the interface.
			Clear ncel (Help)	

Figure 15 -IMU Settings





Table 2 - IMU Measurements lists the IMU measurements available for the 3DM-GX5-15. Additional measurement units may be available in MIP Monitor for some outputs, however they are converted values and do not represent the actual sensor outputs. Only actual output units are listed.

Measurement	Units	Description
Acceleration	gravitational force (g)	three axis acceleration readings in engineering units
Angular Rate	radian/second	three axis rotational velocity reading from gyro- scope in engineering units
Delta Angle (Theta)	radians	time integral of angular rate with configurable time period
Delta Velocity	g*seconds	time integral of acceleration with configurable time period
GPS Correlation Timestamp	weeks, seconds, and status indicators	time metrics from the receiver for tracking IMU sensor data
Ambient Pressure	millibars	air pressure reading from pressure sensor

To view and record IMU outputs, see Basic Setup and Operations on page 10.

Table 2 - IMU Measurements



4.2 Computed Outputs

(Estimation Filter)

The computed outputs are measurements from the 3DM-GX5-15 IMU sensors that are blended through an Auto-Adaptive Extended Kalman Filter (EKF) algorithm. The Kalman Filter produces a better estimation of attitude than can be achieved by the inertial sensors individually. Refer to *Table 3* - *Estimation Filter Outputs* for a complete list of outputs.

In the MIP Monitor software there are user-settable options for how the estimations are made. These settings are available at: Settings > Device > EF. With the Help window open (accessed with the Help button), mousing over context-sensitive settings provides a detailed explanation of the setting (*Figure 16 - Estimation Filter Settings*).

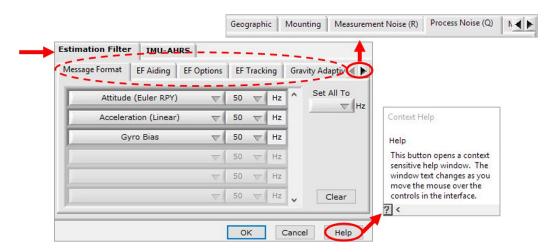


Figure 16 -Estimation Filter Settings

All of the estimation filter outputs are available to record and most, but not all, are available to view in real time in MIP Monitor. In addition to the standard solution, additional filter outputs, such as uncertainties, inertial sensor bias and scale factors, filter status, and physical models (WGS84, WMM, and SAM) are available (*Table 3 - Estimation Filter Outputs*).



To view and record Estimation outputs, see Basic Setup and Operations on page 10.

Measurement	Units	Description
Filter Status		indicates the current state of the EF, such as running or initializing
GPS Time	weeks & seconds	time corresponding to the calculated filter solution
Attitude (Euler RP)	radians	Euler angles representation of orientation expressed as with one-sigma uncertainly estimation available
Attitude (Matrix)		transformation matrix that describes orientation with reference to the ECEF coordinate system
Attitude (Quaternion)		unit quaternions representation of orientation with one-sigma uncertainly estim- ation available
Acceleration (Linear)	meter/second ²	linear acceleration readings with reference to either the sensor or vehicle frame (depend- ing on settings), with bias and scale read- ings, and one-sigma uncertainty estimations also available.
Compensated Angular Rate	radians/second	measured angular rate corrected using the estimated gyroscope scale factor and bias, with reference to either the sensor or vehicle frame
Gravity Vector	meter/second ²	estimated WGS84 gravity vector with reference to either the sensor or vehicle frame (depending on settings)
WSG-84 Local Gravity Magnitude	meter/second ²	local WGS84 gravity vector magnitude
Heading Update	radians	heading used to update EF, calculated from the selected heading source (magnetometer, external, etc.) with one-sigma uncertainty reading available
Pressure Altitude	meters (altitude)	altitude estimate from barometric pressure
SAM	meters (altitude)pressure (milli-bars)temperature (°C) density (kg/m ³)	altitude as derived from the U.S. Standard Atmospheric Model (SAM) using the sensed barometric pressure and air temperature

Table 3 - Estimation Filter Outputs



4.3 Sensor Reference Frames

4.3.1 Geodetic Frame

The World Geodetic System is the standard for cartography and navigation. The latest revision, WGS84, is the reference coordinate system for GPS. It also calculates the magnitude of the local gravity vector using the WGS84 reference formulas.

The WGS coordinates are latitude (ϕ), longitude (λ), and height (h) above the reference ellipsoid. Latitude ranges from -90 degrees at the South Pole to 90 degrees at the North Pole. Longitude ranges from -180 to 180 degrees, with 0 degrees being the prime meridian. The -180/180 degree switchover occurs in the middle of the Pacific Ocean and includes a section of the International Date Line. The model takes into account the oblateness of the Earth's surface.

A point (P) on or above the Earth in the WGS84 coordinate system is notated as: latitude (ϕ), longitude (λ), and height above the reference ellipsoid (h).

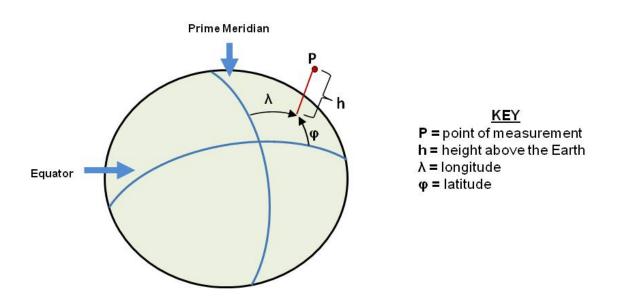



Figure 17 - World Geodetic System (WGS84) Reference Ellipsoid



4.3.2 North East Down (NED) Frame

The North-East-Down (NED) frame is a local coordinate frame, which is formed by a tangent plane located at a particular point (current coordinates) on the WGS84 reference ellipse. The NED frame is constructed with the (true) North vector along the line of longitude, the East vector along the line of latitude, and the Down vector normal to and towards the tangent plane (*Figure 18 - North East Down Frame*). The assumption when using the NED frame is that the local surface can be reasonably approximated by a flat plane. For most applications, this assumption is valid and provides a more intuitive reference frame for expressing attitude information than a global frame.

The 3DM-GX5-15 reports velocity in this frame and attitude with respect to this frame.

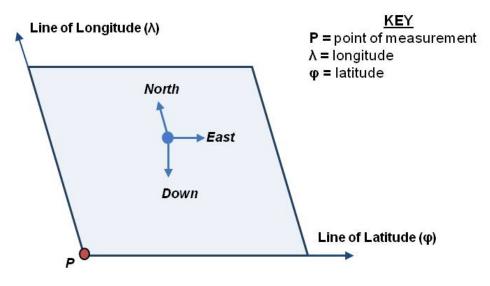

Local Tangent Plane at Reference point $\boldsymbol{P}(\boldsymbol{\phi},\boldsymbol{\lambda},0)$

Figure 18 - North East Down Frame




4.3.3 Sensor Frame

The sensor frame is indicated on the top of the device and is oriented such that the x-axis vector is parallel with the long side of the sensor and points toward the sensor connector, the y-axis is 90° to the right of the x-axis, and the z-axis goes through the bottom of the sensor (outward). These axes were selected so that when the connector on the device is pointed north and the device is upright and level, the sensor frame will match the NED frame exactly, giving zero rotation.

The 3DM-GX5-15 reports acceleration, angular rate, delta-theta, delta-velocity, inertial sensor biases and corrections in this frame. When no sensor-to-platform frame transformation has been provided (*see Platform Frame on page 1*).

The orientation of the sensor frame with respect to the local NED frame can be viewed in the MIP Monitor software at: View > 3D Attitude menu. This window displays the orientation of the sensor in relationship to north and shows measurement origination for acceleration and angular rate. The view can be rotated for clicking, holding, and dragging the image.

Refer to the 3DM-GX5-15 dimensional diagram for the location of the measurement origin (*see Sensor Dimensions and Origin on page 54*).

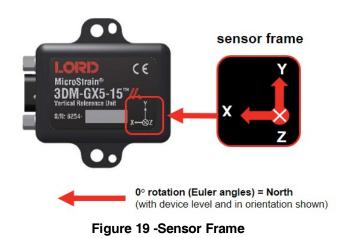



5. Performance Optimization

5.1 Gyroscope Bias

Gyroscope biases (offsets) can be zeroed out to set a baseline value for the static home position and conditions in the application. This should be done after sensor installation.

To set the gyroscope baseline, place the sensor or sensor platform in the desired home position. Allow 2-3 minutes for the sensor to warm up and for the temperature to stabilize for the best bias capture. Select Settings > Capture Gyro Bias (*Figure 20 - Gyro Bias Capture*). The sensor must remain stationary for about twenty seconds while the outputs are being measured. A status message will appear when the capture has been completed.

å MIP Monito	r			_		×
File Control	Settings View Window Ad	lvanced	Help			
	Device System	Not Co	nnected		2	2
Model Nam	Capture Gyro blas	V Ver	Model Number 6253-4220	<i>Options</i> 8g,300dps	COM	×
IV JOH G.	Tare Mounting Pitch/Roll Capture Auto	24	×	09,5000055	,	
	Save Current S Load Startup S Load Default S	opture com	plete.			Ŧ

Figure 20 - Gyro Bias Capture



5.2 Estimation Filter Aiding

There are two categories to customize heading pitch-roll. To enter the Estimation Filter Aiding menu, select the sensor name in the MIP Monitor software main window, then select Settings > Device > Estimation Filter > EF Aiding.

- 1. Heading Aiding has two options including, None and External Heading Message.
- 2. Pitch/Roll Aiding has two options including, None and Gravity Vector.

essage Format (EF Aiding) E	F Options EF Tracking	Gravity Adaptiv
GNSS Source:	Internal GNSS	∇
Heading Aiding:	None	∇
Pitch/Roll Aiding:	Gravity Vector	∇
Altitude Aiding	None	∇

Figure 21 -EF Aiding Options Menu



5.3 Heading Aiding Settings

Device settings are stored in the sensor memory. Only the configuration options that are available for the type of sensor being used are displayed in the configurations menus. The 3DM-GX5-15 has two heading options.

If the setting is none, the estimated heading will drift when little-or-no changes in velocity are sensed (e.g. when stationary or traveling in the same direction at a constant velocity). The external heading message setting means the heading is derived from one of two possible external messages provided by the user: 1. (0x0D, 0x17) or 2. (0x0D, 0x1F) in the LORD Sensing MIP Data Communications Protocol (DCP) DCP Manual.

Message Format	EF Options EF Tracking Gravity Adaptiv
GNSS Source:	Internal GNSS 🛛 🔻
Pitch/Roll Aiding:	✓ None Magnetometer GNSS Velocity Vector External Heading Message
Altitude Aiding	None 🗸

Figure 22 -Heading Aiding Settings



5.3.1 Bias Convergence

Accurate estimation of the biases can take several minutes to converge, therefore after the filter is initialized, the free-inertial performance will continue to improve until the bias estimations settles. The MEMS sensor manufacturers quote bias drift stability numbers which correspond to the expected drift in bias while the sensor is operating. The filter attempts to track the changing biases over time, and a user can expect these bias estimates will be non-constant during a navigation run.

5.4 Adaptive Anomaly Rejection

5.4.1 Gravity Adaptive

Enabling this feature allows the filter to stabilize attitude readings when undergoing linear accelerations. The bandwidth setting determines the cutoff frequency of the filter applied to linear acceleration changes (*see Communications Bandwidth on page 33*). The high and low limits determine the trigger points at which the stabilization is applied. The limit values are in meters/second² and the bandwidth is in Hz. To find this setting, select the sensor name and then Settings > Device > Estimation Filter > Gravity Adaptive.

Manual Adaptive (default setting): Enter user-set fixed values.

Auto-Adaptive: Automatically estimates the values internally.

1	EF Aiding EF Options	EF Tracking 🕻	Gravity Adaptive	Geographic	4 1
	 Gravity Error Measu 	rement Options:	Manual A	1	bled wal Adapti
				Auto	Adaptive
	Input Range	Bandwidth (Hz) 100.0000	w Limit (m/s^2) -0.5000	gh Limi0.5000	
	input lange	100.0000	-0.5000	0.5000	
		nimum (m/s^2)	w Limit (m/s^2)	gh Limit (m/s^2	
	Output Uncertainty	1.0000	2.0000	2.0000)

Figure 23 - Gravity Adaptive Settings



5.5 Angular Rate and Acceleration Limits

The 3DM-GX5-15 angular rate and acceleration ranges depend on the sensors installed in the device. Exceeding the specified range for either sensor will result in estimated state errors and elevated uncertainties until the over-range event is corrected and the filter can resolve the errors.

5.6 Communications Bandwidth

When selecting sensor and estimation outputs to be recorded, communication bandwidth considerations should be taken into account, especially when using RS232 serial communications. Lower baud rates equate to lower communication bandwidth, which can be consumed quickly by selecting a large number of measurements at high sample rates. Overrunning the communication bandwidth will result in dropped data packets. Most computer RS232 ports are limited to 115,200 baud even though the 3DM-GX5-15 is capable of running at 921,600 baud.

5.7 Estimation Filter Operation

The 3DM-GX5-15 combines the information from the IMU sensors to calculate an orientation solution that incorporates the strengths of the individual while minimizing their weaknesses.

The 3DM-GX5-15 runs an Auto-Adaptive Extended Kalman Filter as a full-state dynamics model. The state propagation utilizes Newton's and Euler's equations of motion with the acceleration and angular rate treated as control inputs.

The Kalman filter estimates the full state of attitude for a total of 16 states: 4 attitude (quaternion), 3 accel bias, 3 gyro bias, 3 accel scale factor, and 3 gyro scale factor states. The gyro bias states are estimated to compensate for the time-varying biases inherent in MEMS gyros, which are the largest error sources for these devices.

The Kalman filter also provides statistical information about the quality of the estimated states described in a covariance matrix. The diagonal terms of the matrix are the variance of each state, thus the square root of these values are 1-sigma standard deviations. These values give the filter's estimation of how well it knows the individual states, given what it knows about the statistical properties of the noise sources of the various sensors and also provide feedback to the user as uncertainty values.



5.8 Estimation Filter Convergence

5.8.1 Initial Convergence

After a successful initialization, a period of convergence for the Kalman filter states occurs. Roll and pitch angles typically converge very quickly. Accelerometer bias and gyro bias take more time to converge. If the initial attitude estimate provided to the filter is well outside of the true attitude, the filter may diverge and never recover. This is most likely to occur for the heading estimate when a poor value is used for initialization and when the vibration environment is strong. Should this occur, it is recommended that the filter be reset and new attitude estimate provided.

5.8.2 Output Uncertainty

The 3DM-GX5-15 estimation data set includes a filter status field that contains a set of status flags. These flags pertain to high covariance values for attitude and inertial sensor parameters. These flags should be monitored and cross-checked against the corresponding uncertainty fields when they appear. This can assist in determining how trustworthy the solution generated by the Kalman filter is. When the filter is first initialized, it is likely that some of these values will be beyond limits, and the flags may be asserted. This fact should be taken into account when developing automated monitoring systems.

5.9 Vibration Isolation

The 3DM-GX5-15 should be isolated from strong vibrations a much as possible. Strong, continuous vibrations appear as unaccounted noise to the estimation filter, degrading its performance. When vibration cannot be isolated, making adjustments to the Accelerometer Noise and Gyro Noise parameters to account for the additional noise will improve the accuracy of the estimation filter outputs.

5.10 IMU Sensor Calibration

All of the internal sensors in the 3DM-GX5-15 are calibrated when the device is manufactured, and the calibration values are saved in the device memory. is not required unless the device has been under conditions that exceed the operating specifications. For example, if the sensor has been exposed to excessive shock beyond the rated g-force, performance may be compromised. Indications of internal sensor damage may be seen as excessive measurement offsets or drift when the sensor is in a neutral motionless position.

5.11 Temperature Compensation

All sensor conversion and calibration formulas include temperature compensation. All computed outputs and IMU sensor outputs are automatically adjusted for local temperature.



5.12 Import and Export Settings

The import and export settings features provide a consolidated file of the user settings, enabling Device Settings information to be saved and shared. For example, exporting settings to the LORD technical support team helps facilitate fast and accurate resolution of technical issues.

To import the sensor settings, select the sensor name in the MIP Monitor software main window, then select Settings > Import Settings, then follow the prompt to choose where the file will be saved and name the file.

To export the sensor settings, select the sensor name in the MIP Monitor software main window, then select Settings > Export Settings, then follow the prompt to choose where the file will be saved, and select OK. The file will be named by default using the sensor name, serial number, date and time.

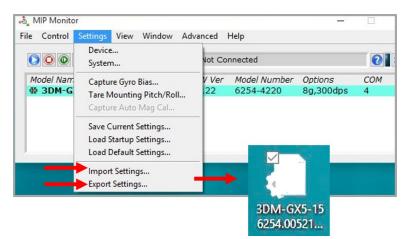


Figure 24 -Import/Export Settings Menu



6. Sensor Installation

6.1 Sensor Mounting

The 3DM-GX5-15 sensor housing is rated for indoor use only, unless used inside a protective enclosure.

The sensor has two mounting tabs with holes for fastening. Mounting screws should be brass or 300 Series stainless steel. Nylon washers and thread-lock are recommended. There are two additional holes used for precise alignment with 2mm dowel pins. One of the holes is slotted to allow for relaxed pin positioning accuracy. The sensor can be mounted in any orientation, as required for the application (*see Sensor Reference Frames on page 26*). The axes are labeled on the face of the sensor for reference, and the sensor measurement origin is shown in the sensor dimensional drawing (*see Sensor Dimensions and Origin on page 54*).

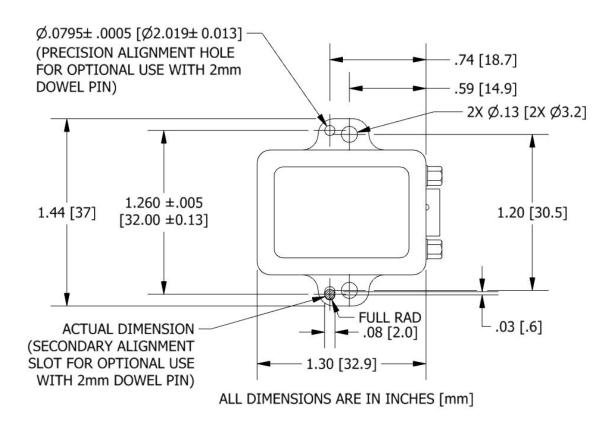


Figure 25 - Mounting the Sensor



7. OEM System Integration

The 3DM-GX5-15 connectivity kit comes with everything that is needed for sensor configuration, operation, and data collection. However, many applications will require custom solutions because of physical or environmental constraints, required sensor output processing, or for integration into control systems that react to the sensor outputs. (*See Sales Support on page 50*).

7.1 Data Communications Protocol (DCP)

The LORD Sensing MIP Data Communications Protocol (DCP) includes all commands available for controlling and acquiring data from the 3DM-GX5-15, including many that are not available in the MIP Monitor software. Programming is performed through a standard serial interface program. The programming interface is comprised of setup and control commands and a very flexible user-configurable data output format. The commands and data are divided into four command sets and three data sets corresponding to the internal architecture of the device. The protocol is packet-based. All commands, replies, and data are sent and received as fields in a message packet. The packets have a descriptor-type field based on their contents, so it is easy to identify if a packet contains commands, replies, or data.

To view or download the 3DM-GX5-15DCP Manual go to: http://www.microstrain.com/support/documentation

Select 3DM-GX5-15 from the "Select a Product to View Documentation" drop-down menu. The manual will appear in a list under "General Documentation."

The MIP software developers kit (SDK) includes sample code and can be found on the LORD Sensing website Support page or by contacting Technical Support (*see Technical Support on page 47*).

The LORD Sensing MIP Data Communications Protocol (DCP) describes each command description, message syntax, and message option. It also provides examples, and can also be found on the LORD Sensing website or through Technical Support.



7.1.1 Packet Builder

To expedite program development, a packet builder tool is included in the MIP Monitor software. The packet builder allows users to send multiple packets to the 3DM-GX5-15 and view the resulting reply data.

Applicable protocol structure and design is described in the 3DM-GX5-15 LORD Sensing MIP Data Communications Protocol (DCP) Manual DCP Manual . For additional help, contact Technical Support (*see Technical Support on page 47*).

To use the packet builder select Advanced > Packet Builder from the MIP Monitor main window (7.1.1 Packet Builder). The sensor must be in the Standard communications mode to use this feature.

	Communication Mode Device Mode					0	
Model Name Serial Numbe	Packet Builder		Not C	Connected			
₩ 3DM-GX5-15 6254.00521	GNSS External Input	Descriptor Set P	acket Field	ds			enter field
		01	Desc x 01	Data	-		descriptor
		Reset	Desc ×01	Data		-	and data
	send to 📥	Send				-1	
	sensor	Timeout	Desc x 01	Data		- 1	
		2.00	Desc x 01	Data			
		Sent Packet					
Se	ensor reply 📥	Reply Data			Timed Out		
		Pkt Ix Desc set			🔿 ack/nack	^	
		40 x 0 x	0				
		Pkt Ix Desc set	Desc Data		🔿 ack/nack		
			Desc Data		🔿 ack/nack		
		Pkt Ix Desc set	Desc Data 0 Desc Data) ack/nack		

Figure 26 -Packet Builder

7.1.2 Sensor Direct Mode

The MIP Monitor software can be used to put the sensor in a mode that allows direct programmatic access to the internal Inertial Measurement Unit (IMU). The IMU has its own processor and protocol commands and native data outputs from the individual IMU sensors that may not be available in MIP Monitor.

When in Sensor Direct mode the device normal functionality is not available. The protocol commands used to interface with the IMU are a subset of the standard LORD Sensing MIP Data Communications Protocol (DCP) and are further described in the LORD Sensing MIP Data Communications Protocol (DCP) manual. For additional information contact LORD Sensing Technical Support (*see Technical Support on page 47*).



To enter this mode select Advanced > Communications> Sensor Direct from the MIP Monitor main window. Once in this mode the device status message will indicate Sensor Direct Mode (*Figure 27 - Sensor Direct Mode*).

To exit Sensor Direct Mode select the Refresh button in the MIP Monitor at any time, or use Advanced > Communication menu to select the Standard operating mode.

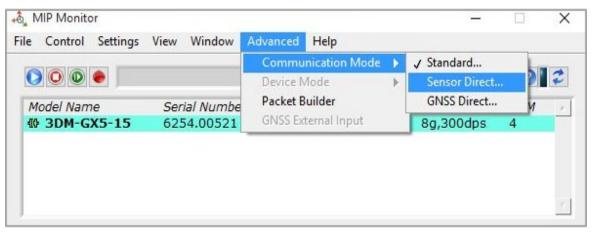


Figure 27 -Sensor Direct Mode



7.2 Sensor Wiring



Only use power supplies within the operating range of the sensor, or permanent sensor damage or personal injury could result. There are two input power pins available, each with different voltage ranges. Connect only one at a time. Observe connection polarity.

Sensor power and serial communications cables are available from LORD Sensing and come with the sensor connectivity kits. These cables will have the micro-DB9 connector on one end (to connect to the sensor) and either a standard DB9 on the other end (for RS232 communication) or a USB connector (for USB communications). Alternately, the micro-DB9 can be purchased from LORD Sensing with flying leads or the connector by itself can be purchased from the manufacturer (Ulti-Mate Connector Inc). *See Parts and Configurations on page 48* for a list of available options. For the cable diagram, *see Sensor Dimensions and Origin on page 54*.

The connector interface includes connections for USB and RS232 communications (only connect one), two options for sensor input power range (only connect one), and a precision hardware timing input (PPS input) for synchronizing with external timestamps. The sensor selects the appropriate serial communication (USB or RS232) on power-up based on which connection is used.



sensor interface connector

sensor pin number	signal
1	USB D-
2	USB D+
3**	+4V to +5.5 VDC
4	RS232 RxD
5	RS232 TxD
6 **	+5.2V to +36 VDC
7	PPS input
8	GND
9	

** use either pin 3 OR pin 6 for sensor power

Figure 28 -Connector Wiring



7.3 Sampling on Start-up

The Save Current Settings command can be used to instruct the sensor to start streaming data as soon as it powered on. This can be useful in sensor integration applications in which immediate data acquisition is desired, and connection to MIP Monitor for data logging is not required. This functionality can also be embedded in user-designed applications by using the corresponding LORD Sensing MIP Data Communications Protocol (DCP) command. To view or download the DCP Manual, go to: http://www.microstrain.com/support/documentation, from the drop-down menu select 3DM-GX5-15, and then select document from the list.

NOTE
When setting the sensor to begin sampling on start-up, verify that the sensor is sampling by reading the status indicator on the device (<i>see Interface and Indicators on page 9</i>), or by viewing the serial data stream from the host computer. If communication with MIP Monitor is established, the sampling will stop to facilitate device configuration.

To save the current sensor configuration, first adjust the sensor settings to the desired values, and then start streaming. Next select Settings > Save Current Settings from the main window (*Figure 29 - Save Sensor Settings*). The setting will remain intact when the sensor is powered off and then on again.

To recall the last saved settings select Settings > Load Startup Settings.

File Control		Advanced	Help			
	Device System	Not Co	onnected		2	2
Model Nam	Capture Gyro Bias	FW ver	Model Number	Options	COM	
tte 3DM-G		1006	6236-4220	5g,300dps	8	
	Save Current Settings					
	Load Startup Settings					
	Load Default Settings					
		-				1

Figure 29 -Save Sensor Settings



7.4 Connecting to a Datalogger

Many inertial applications incorporate dataloggers of all different types to collect and distribute sensor outputs. For more information and examples refer to the "Using Dataloggers with Inertial Sensors" Technical Note on the LORD Sensing website, or contact LORD Sensing Technical Support (*see Technical Support on page 47*).


7.5 Using Wireless Adapters

In some applications it can be very useful to set up wireless communications between the sensor to the host computer. One way this can be accomplished is by connecting the serial output of the sensor to a serial to wireless converter and then connecting the wireless receiver to the host computer. For more information and an example refer to the "Using RS232 Bluetooth Adapters" Technical Note on the LORD Sensing website or contact LORD Sensing Inertial Sensor Products Technical Support (*see Technical Support on page 47*).



8. Troubleshooting

8.1 Troubleshooting Guide

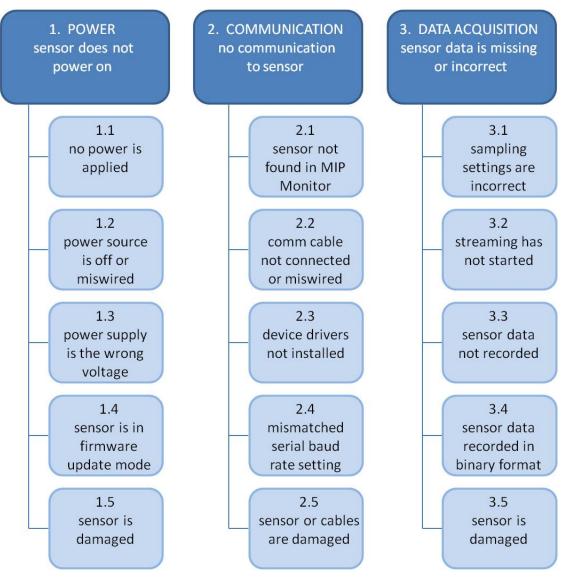



Problem	Possible cause and recommended solution
1. POWER sensor does not power	1.1 no power is applied The status indicator on the device will be off. Make sure the sensor is connected to a power source and the status indicator illuminates.
on	1.2 power source is off or miswired
	Verify the device power source is connected correctly.
	1.3 power supply is the wrong voltage
	Using a power supply other than the one provided with the device, or a supply that is outside of the device operating range, could result in permanent damage or cause it to not work properly.
	1.4 sensor is in firmware update mode
	Firmware update mode is used when updating firmware on the device. If the firmware updater fails, it is possible that the device can get stuck in the firmware update mode, and the sensor will be non-responsive. Contact LORD Sensing Technical Support (<i>See Technical Support on page 47</i>).
	1.5 sensor is damaged
	If all power settings and connections have been verified, and the sensor is still unresponsive, contact LORD Sensing Technical Support (<i>See Technical Support on page 47</i>).
	2.1 sensor not found in MIP Monitor
2. COMMUNICATION	In MIP Monitor use the Refresh button to look for the sensor again. If the sensor is still not found try cycling power to the sensor and refreshing.
sensor	2.2 communication cable not connected or miswired
	Check, remove, and reconnect communications and power cables as applicable. Replace or rewire as needed.
	2.3 device drivers not installed
	Verify the drivers (included with MIP Monitor Software Suite) are installed on the computer and that the software has had sufficient time to detect it. <i>See Software Installation on page 11</i>
	2.4 serial baud rate setting (not applicable to USB devices)
	The host computer serial port baud rate and the sensor baud settings must match in order for communication be established. In MIP Monitor this occurs automatically and the baud rate can only be changed once initial communication is established. To change the baud rate in MIP Monitor select Settings > System and select the desired rate.
	NOTE: if the baud rate is set higher than the computer serial port is capable of reading, communication will be permanently lost with the device. To recover, it will need to be connected to a higher speed port, connected via USB cable, or sent to LORD



Problem	Possible cause and recommended solution
	Sensing for reconfiguration.
	2.5 sensor or cables are damaged
	Verify all connections, power, and settings. If available, try installing an alternate cable or sensor one at a time to see if the faulty device can be identified. If no conclusion can be determined, or to send a device in for repair, contact LORD Sensing Technical Support (<i>See Technical Support on page 47</i>).
	3.1 sampling settings are incorrect
3. DATA ACQUISITION sensor data is missing	If unexpected measurements or sampling rates are displayed or recorded, enter the Device Settings menu and verify the sampling settings.
or incorrect	3.2 streaming has not started
	If data streaming is occurring the sensor device status indicator will also be flashing to indicate sampling. In MIP Monitor the device status information field will indicate Streaming. If the sensor is not streaming data, activate it in the software.
	3.3 sensor data not recorded
	Verify data recording has been activated. In MIP Monitor the device status information field will indicate Recording Data. If the sensor isn't recording, activate in the software. Verify specific measurements have been enabled for sampling and recording.
	NOTE: Data is recorded in time sequence. If measurements are set to different sample rates, not all time intervals will include a reading from each output that is being recorded.
	3.4 sensor data recorded in binary format
	When data recording is started the user can choose between CSV and Binary output formats. If the data is recorded in Binary format it will require a translation program that utilizes the LORD Sensing MIP Data Communications Protocol (DCP) to make it readable.
	3.5 sensor is damaged
	With the sensor in a static neutral position data, look for baseline offset or drift on the IMU sensor outputs. Sensor damage can occur as a result of excessive g-force other conditions outside of its operating specifications.



8.2 Repair and Calibration



General Instructions

In order to return any LORD Sensing product, you must contact LORD Sensing Sales or Technical Support to obtain a Return Merchandise Authorization (RMA) number. All returned merchandise must be in the original packaging, including manuals, accessories, cables, etc. with the RMA number clearly printed on the outside of the package. Removable batteries should be removed and packaged in separate protective wrapping. Please include the LORD Sensing model number and serial number, as well as your name, organization, shipping address, telephone number, and email. Normal turnaround for RMA items is seven days from receipt of item by LORD Sensing.



Warranty Repairs

LORD Sensing warrants its products to be free from defective material and workmanship for a period of one (1) year from the original date of purchase. LORD Sensing will repair or replace, at its discretion, a defective product if returned to LORD Sensing within the warranty period. This warranty does not extend to any LORD Sensing products that have been subject to misuse, alteration, neglect, accident, incorrect wiring, mis-programming, or use in violation of operating instructions furnished by LORD Sensing . It also does not extend to any units altered or repaired for warranty defect by anyone other than LORD Sensing .



Non-Warranty Repairs

All non-warranty repairs/replacements include a minimum charge. If the repair/replacement charge exceeds the minimum, LORD Sensing will contact the customer for approval to proceed beyond the minimum with the repair/replacement.



8.3 Technical Support

There are many resources for product support found on the LORD Sensing website including technical notes, FAQs, and product manuals.

http://www.microstrain.com/support_overview.aspx

For further assistance our technical support engineers are available to help with technical and applications questions.

Technical Support

sensing_support@LORD.com

Phone: 802-862-6629

SKYPE: microstrain.orientation.support

Live Chat is available from the website during business hours: 9:00 AM to 5:00 PM (Eastern Time US & Canada)

8.4 Maintenance

There are no user-serviceable parts on the 3DM-GX5-15. Removing the device cover or disassembling in any way voids the product warranty.



9. Parts and Configurations

9.1 Standard Configurations

For the most current product information, custom, and OEM options not listed below, refer to the LORD Sensing website or contact the LORD Sensing Sales Department.

Table 4 - Model Numbers describes the standard models available at the time this manual was published. Once a model is selected, the part number is further defined by desired configuration and interface options. The model determines the first four digits of the product part number; the options are indicated in the last four digits (*Figure 30 - Standard Part Numbers*).

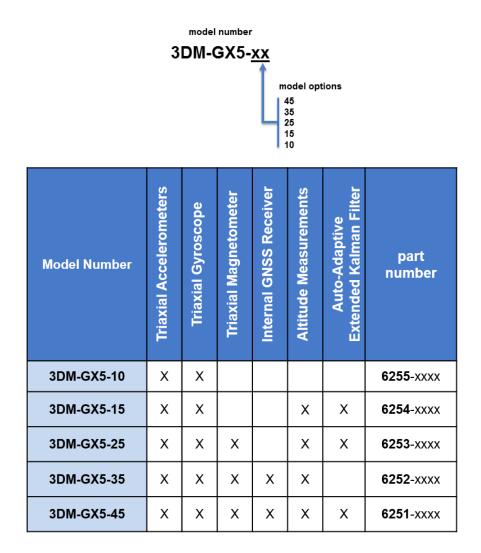


Table 4 - Model Numbers



The same options are available in each model, and are indicated in the last four digits of the product part number. For a list of the starter kit contents, (*see Components on page 1*).

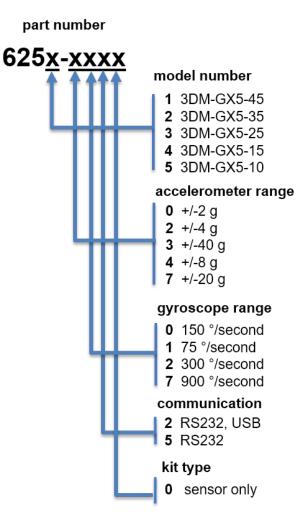


Figure 30 -Standard Part Numbers



9.2 Accessories

The following parts are available for use with the 3DM-GX5-15. For the most current product information refer to the LORD Sensing website or contact the Sales Department. (*see Sales Support on page 50*).

Description	LORD Sensing Part Number
RS232 connectivity kit	6212-3000
USB connectivity kit	6212-3002

Table 5 - Sensor Accessories

Description	Manufacturer part number
"A" Series or "P" Series 9-pin male Micro-D connector	Ulti-Mate PR09N05

Table 6 - Sensor Mating Connector

9.3 Sales Support

Products can be ordered directly from the LORD Sensing website by navigating to the product page and using the Buy feature.

http://www.microstrain.com/inertial

For further assistance, our sales team is available to help with product selection, ordering options, and questions.

Sales Support

sensing_sales@LORD.com

Phone: 802-862-6629

9:00 AM to 5:00 PM (Eastern Time US & Canada)



10. Specifications

General				
Integrated sensors	Triaxial accelerometer, tria			
	temperature sensors, and			
	Inertial Measurement Unit			
	acceleration, angular rate,	ambient pressure, delta		
	theta, delta velocity			
	Computed outputs:			
D	Extended Kalman Filter (El	KF):filter status, attitude		
Data outputs	estimates (Euler angles, qu			
	matrix), bias compensated	u		
	altitude, gravity-free linear	-		
	uncertainties, gyroscope a	-		
	scale factors and uncertainties, gravity models, and			
Inertial M	more. mertial Measurement Unit (IMU) Sensor Outputs			
	Accelerometer Gyroscope			
Moosurement renge	±8 g (standard)	300°/sec (standard) ±75, ±150, ±900°		
Measurement range	±2 g, ±4 g, ±20 g, ±40 g	/sec (optional)		
	(optional)	,		
Non-linearity	±0.02% fs	±0.02% fs		
Bias instability	±0.04 mg	8°/hr		
Initial bias error	±0.002 g	±0.04°/sec		
Scale factor stability	±0.03%	±0.05%		
Noise density	25 μg/√Hz (2 <i>g</i>)	0.005°/sec/√Hz		
		0.005°/sec/√Hz (300°/sec)		
Alignment error	±0.05°	±0.05°		
Adjustable bandwidth	225 Hz (max)	250 Hz (max)		
Offset error over		· · · ·		
temperature	0.06% (typ)	0.04% (typ)		
Gain error over	0.020((true)	0.020((turn)		
temperature	0.03% (typ)	0.03% (typ)		
Scale factor non-	0.02% (typ)	0.02% (typ)		
linearity	0.06% (max)	0.06% (max)		
(@ 25° C)				
Vibration induced noise		0.072°/s RMS/g RMS		
Vibration rectification error (VRE)	0.03%	0.001°/s/ <i>g</i> ² RMS		
	Digital sigma-delta wide ba	l Ind anti-aliasing filter to		
IMU filtering	digital averaging filter (use	0		
	physical units.	j,		
Sampling rate	1 kHz	4 kHz		
IMU data output rate	1 Hz to 1000 Hz	,		
	Pressure Altimeter			
Range	-1800 m to 10,000 m			
Resolution	<0.1 m			
Noise density	0.01 hPa RMS			
Sampling rate	25 Hz			



3DM[®]-GX5-15 User Manual

Computed Outputs		
Attitude accuracy	EKF outputs: ±0.25° RMS roll and pitch (typ) CF outputs: ±0.5° roll and pitch (static, typ) and ±2.0° roll and pitch (dynamic, typ)	
Attitude heading range	360° about all axes	
Attitude resolution	<0.01°	
Attitude repeatability	0.2° (typ)	
Calculation update rate	500 Hz	
Computed data output rate	EKF outputs: 1 Hz to 500 Hz CF outputs: 1 Hz to 1000 Hz	
Operating Parameters		
Communication	USB 2.0 (full speed) RS232 (9,600 bps to 921,600 bps, default 115,200)	
Power source	+4 to + 36 V dc V dc	
Power consumption	500 mW (typ)	
Operating temperature	-40 °C to +85 °C	
Mechanical shock limit	500 g (calibration unaffected) 1000 g (bias may change), 5000 g (survivability)	
MTBF	(TBD)	
	Physical Specifications	
Dimensions	36.0 mm x 36.6 mm x 11.1 mm	
Weight	16.5 grams	
Enclosure material	Aluminum	
Regulatory compliance	ROHS, CE	
	Integration	
Connectors	Data/power output: micro-DB9	
Software	MIP Monitor, Windows XP/Vista/7/8/10 compatible	
Compatibility	Protocol compatibility across 3DM-GX3, GX4, RQ1, GQ4, GX5 and CV5 product families	
Software development kit (SDK)	MIP data communications protocol with sample code available (OS and platform independent)	



11. Safety Information

This section provides a summary of general safety precautions that must be understood and applied during operation and maintenance of components in the LORD Sensing Inertial Sensor Products. Throughout the manual, ANSI Z535 standard safety symbols are used to indicate a process or component that requires cautionary measures.



Situations in which potentially hazardous conditions exist that could result in death or serious injury of workers and/or the general public if not avoided.




NOTICE

Situations where a non-immediate or potential hazard presents a lesser threat of injury that could result in minor or moderate injury to workers and/or the general public.

Situations where a non-immediate or potential hazard presents a risk to damage of property and equipment. May be used to indicate important operational conditions.

11.1 Disposal and Recycling





The 3DM-GX5-15 contains internal printed circuit boards and electronic components. These items are known to contain toxic chemicals and heavy metals that are harmful to humans health and the environment. Disposal is subject to federal and local laws. Do not discard the device in the trash. Follow proper electronic waste disposal protocol, as dictated by federal and local authorities. Some states also have programs for extracting reusable parts for recycling.




12. Reference Diagrams

The diagrams in this section are to intended to aid in product installation and troubleshooting. For more information contact LORD Sensing Technical Support (*see Technical Support on page 47*).

12.1 Sensor Dimensions and Origin

This diagram describes the sensor physical specification including the measurement point of origin.

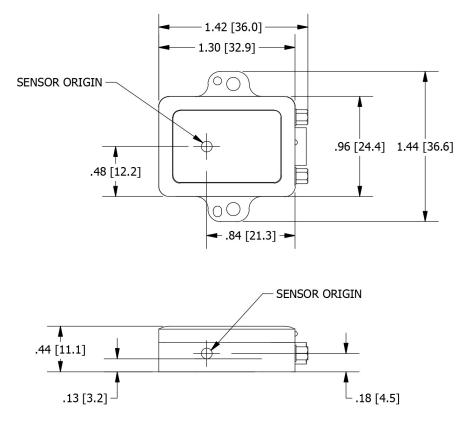


ALL DIMENSIONS ARE IN INCHES [mm]





12.2 Power Supply Specifications

These specifications describe the power supply included in the 3DM-GX5-15 connectivity kit.

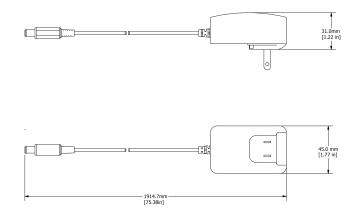

Operating Parameters		
AC input voltage rating	100 to 240 V ac	
AC input voltage range	90 to 264 V ac	
AC input frequency range	47 to 63 Hz	
AC input current	(RMS) maximum @ 120 V ac (RMS) maximum @ 240 V ac	
Leakage current	0.25 mA maximum @ 254 V ac	
Inrush current (cold start @ 25 °C)	V ac @ maximum load V ac @ maximum load	
Input power saving (at no load)	0.3 W maximum	
DC voltage rating		
DC load capacity	maximum	
Ripple	peak to peak maximum	
Regulation	± 5 % line and load	
Efficiency	% average	
Circuit protection	auto restart	
Safety approvals	cUL/UL, SAA, CE, C-Tick	
Environmental Parameters		
Operating temperature	0 °C to +40 °C	
Storage temperature	-25 °C to +	
Humidity	to 90 %	
Emissions	FCC Class B, EN55022 Class B	
Dielectric withstanding (hi-pot) test	primary to secondary: 3000 V ac	
	Physical Specifications	
Dimensions		
Weight		
DC output connector	2.1 mm x 5.5 mm center positive standard	
Mating connector	Kycon KLD-0202-A or equivalent	



12.3 Communication and Power Cables

included in the 3DM-GX5-15 connectivity kits.

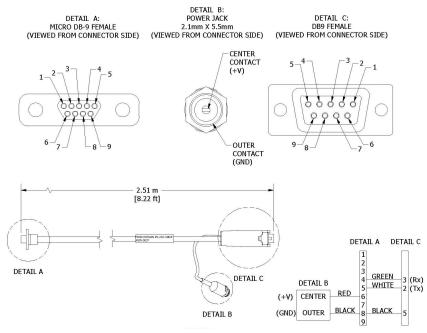


Figure 32 -RS232 Communications and power cable

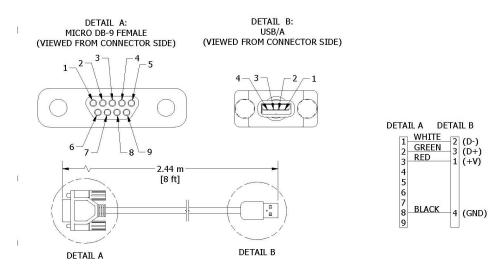


Figure 33 -USB Communications cable



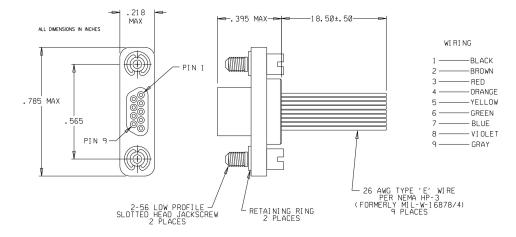


Figure 34 -Connecter interface cable (sold separately, PN: 6224-0100)



13. Reference Documents

Many references are available on the LORD Sensing website including product user manuals, technical notes, and quick start guides. These documents are continuously updated and may provide more accurate information than printed or file copies.

Document	Where to find it
3DM-GX5-15 support documentation	http://www.microstrain.com/documents/inertial
NIST Calibration Procedures	http://www.nist.gov/calibrations/
ASTM Testing Procedures	http://www.astm.org/Standard/standards-and- publications.html

Table 7 - Document Resources



14. Glossary

Α

A/D Value

The digital representation of analog voltages in an analog-to-digital (A/D) conversion. The accuracy of the conversion is dependent on the resolution of the system electronics. Higher resolution produces a more accurate conversion.

Acceleration

In physics, acceleration is the change in the rate of speed (velocity) of an object over time.

Accelerometer

A sensor used to detect and measure magnitute and direction of an acceleration force (g-force) in reference to its sensing frame. For example, at rest perpendicular to the Earth's surface an accelerometer will measure 9.8 meters/second squared as a result of gravity. If the device is tilted the acceleration force will change slightly, indicating tilt of the device. When the accelerometer is moving it will measure the dynamic force (including gravity).

Adaptive Kalman Filter (AKF)

A type of Extended Kalman Filter (EKF) that contains an optimization algorithm that adapts to dynamic conditions with a high dependency on adaptive technology. Adaptive technology refers to the ability of a filter to selectively trust a given measurement more or less based on a trust threshold when compared to another measurement that is used as a reference. Sensors that have estimation filters that rely on adaptive control elements to improve their estimations are referred to as an AKF.

AHRS (Attitude and Heading Reference System)

A navigation device consisting of sensors on the three primary axes used to measure vehicle direction and orientation in space. The sensor measurements are typically processed by an onboard algorithm, such as an Estimation Filter, to produce a standardized output of attitude and heading.

Algorithm

In math and science, an algorithm is a step-by-step process used for calculations.

Altitude

the distance an object is above the sea level

Angular rate

The rate of speed of which an object is rotating. Also know as angular frequency, angular speed, or radial frequency. It is typically measured in radians/second.

API (Applications Programming Interface)

A library and/or template for a computer program that specifies how components will work together to form a user application: for example, how hardware will be accessed and what data structures and variables will be used.



ASTM (Association of Standards and Testing)

a nationally accepted organization for the testing and calibration of technological devices

Attitude

the orientaion of an object in space with reference to a defined frame, such as the North-East-Down (NED) frame

Azimuth

A horizontal arc measured between a fixed point (such as true north) and the vertical circle passing through the center of an object

В

Bias

A non-zero output signal of a sensor when no load is applied to it, typically due to sensor imperfections. It is also called offset.

С

Calibration

to standardize a measurement by determining the deviation standard and applying a correction, or calibration, factor

Complementary Filter (CF)

A term commonly used for an algorithm that combines the readings from multiple sensors to produce a solution. These filters typically contain simple filtering elements to smooth out the effects of sensor over-ranging or anomalies in the magnetic field.

Configuration

A general term applied to the sensor indicating how it is set up for data acquisition. It includes settings such as sampling rate, active measurements, measurement settings, offsets, biases, and calibration values

Convergance

when mathematical computations approach a limit or a solution that is stable and optimal.

D

Data Acquisition

the process of collecting data from sensors and other devices

Data Logging

the process of saving acquired data to the system memory, either locally on the device, or remotely on the host computer

Data rate

the rate at which sampled data is transmitted to the host



Delta-Theta

the time integral of angular rate expressed with refernce to the device local coordinate system, in units of radians

Delta-velocity

the time integral of velocity expressed with refernce to the device local coordinate system, in units of g*second where g is the standard gravitational constant

Ε

ECEF (Earth Centered Earth Fixed)

a reference frame that is fixed to the earth at the center of the earth and turning about earth's axis in the same way as the earth

Estimation Filter

A mathematical algorithm that produces a statistically optimum solution using measurements and references from multiple sources. Best known estimation filters are the Kalman Filter, Adaptive Kalman Filter, and Extended Kalman Filter.

Euler angles

Euler angles are three angles use to describe the orientation of an object in space such as the x, y and z or pitch; roll; and yaw. Euler angles can also represent a sequence of three elemental rotations around the axes of a coordinate system.

Extended Kalman Filter (EKF)

Used generically to describe any estimation filter based on the Kalman Filter model that can handle non-linear elements. Almost all inertial estimation filters are fundamentally EKFs.

G

GNSS (Global Navigation Statellite System)

a global network of space based statellites (GPS, GLONASS, BeiDou, Galileo, and others) used to triangulate position co-ordinates and provide time information for navigational purposes

GPS (Global Positioning System)

a U.S. based network of space based statellites used to triangulate position co-ordinates and provide time information for navigational purposes

Gyroscope

a device used to sense angular movements such as rotation

Н

Heading

an object's direction of travel with reference to a co-ordinate frame, such as lattitude and longitude



Host (computer)

The host computer is the computer that orchestrates command and control of attached devices or networks.

<u>|</u>

IMU

Inertial Measurement System

Inclinometer

device used to measure tilt, or tilt and roll

Inertial

pertaining to systems that have inertia or are used to measure changes in inertia as in angular or linear accelerations

INS (Inertial Navigation System)

systems that use inertial measurements exclusively to determine position, velocity, and attitude, given an initial reference

Κ

Kalman Filter

a linear quadratic estimation algorithm that processes sensor data or other input data over time, factoring in underlying noise profiles by linearizing the current mean and covariance to produces an estimate of a system's current state that is statistically more precise than what a single measurement could produce

L

LOS (Line of Sight)

Describes the ideal condition between transmitting and receiving devices in a wireless network. As stated, it means they are in view of each other with no obstructions.

Μ

Magnetometer

A type of sensor that measures the strength and direction of the local magnetic field with refernce to the sensor frame. The magnetic field measured will be a combination of the earth's magnetic field and any magnetic field created by nearby objects.

MEMS (Micro-Electro-Mechanical System)

The technology of miniaturized devices typically made using micro fabrication techniques such as nanotechnology. The devices range in size from one micron to several millimeters and may include very complex electromechanical parts.



Ν

NED (North-East-Down)

A geographic reference system

0

OEM

acronym for Original Equipment Manufacturer

Offset

A non-zero output signal of a sensor when no load is applied to it, typically due to sensor imperfections. Also called bias.

Orientation

The orientaion of an object in space with reference to a defined frame. Also called attitude.

Ρ

Pitch

In navigation pitch is what occurs when vertical force is applied at a distance forward or aft from the center of gravity of the platform, causing it to move up or down with respect to the sensor or platform frame origin.

Position

The spatial location of an object

PVA

acronym for Position, Velocity, Attitude

Q

Quaternion

Mathematical notation for representing orientation and rotation of objects in three dimensions with respect to the fixed earth coordinate quaternion. Quaternions convert the axis-angle representation of the object into four numbers and to apply the corresponding rotation to a position vector representing a point relative to the origin.

R

Resolution

In digital systems, the resolution is the number of bits or values available to represent analog voltages or information. For example, a 12-bit system has 4096 bits of resolution and a 16-bit system has 65536 bits.



RMS

acronym for Root Mean Squared

Roll

In navigation roll is what occurs when a horizontal force is applied at a distance right or left from the center of gravity of the platform, causing it to move side to side with respect to the sensor or platform frame origin.

RPY

acronym for Roll, Pitch, Yaw

RS232 a serial data communications protocol

RS422

a serial data communications protocol

S

Sampling the process of taking measurements from a sensor or device

Sampling rate

rate at which the sensors are sampled

Sampling Rate

the frequency of sampling

Sensor

a device that physically or chemically reacts to environmental forces and conditions and produces a predictable electrical signal as a result

Sigma

In statistics, sigma is the standard deviation from the mean of a data set.

Space Vehicle Information

refers to GPS satellites

Streaming

typically when a device is sending data at a specified data rate continuously without requiring a prompt from the host

U

USB (Universal Serial Bus) A serial data communications protocol



UTC (Coordinated Universal Time)

The primary time standard for world clocks and time. It is similar to Greenwich Mean Time (GMT).

V

Vector

a measurement with direction and magnitude with refernce from one point in space to another

.

Velocity

The rate of change of position with respect to time. Also called speed.

W

WAAS (Wide Area Augmentation System)

An air navigation aid developed to allow aircraft to rely on GPS for all phases of flight, including precision approaches to any airport.

WGS (World Geodetic System)

a protocol for geo-referencing such as WGS-84

Υ_____

Yaw

In navigation yaw is what occurs when rotational force is applied at a distance forward or aft from the center of gravity of the platform, causing it to move around the center axis of a sensor or platform frame origin.

